

REAR GATE LATCH LOCK ACTUATOR

Security and Locks


15. Rear Gate Latch Lock Actuator

S909313

A: REMOVAL

S909313A18

- 1) Remove the rear gate latch assembly. <Ref. to SL-43 REMOVAL, Rear Gate Latch Assembly.>
- 2) Remove the rear gate lock actuator.

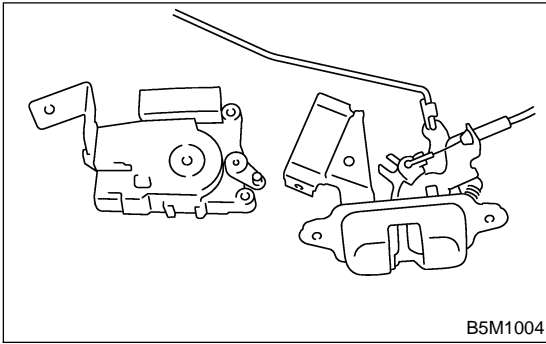

B: INSTALLATION


S909313A11

Install in the reverse order of removal.

C: INSPECTION

S909313A10

- 1) Disconnect the door lock actuator harness connector.
- 2) Connect the battery to the door lock actuator terminals.

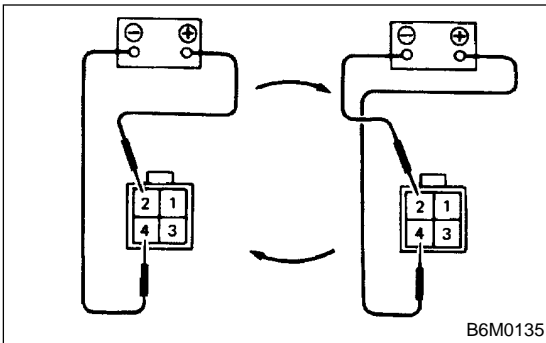

Battery connection	Actuator operation
No. 2 (+) — No. 4 (-)	Unlocked → Locked
No. 4 (+) — No. 2 (-)	Locked → Unlocked

If NG, replace the rear gate latch lock actuator.