



19. Ignition Key Lock S909318

A: REPLACEMENT S909318A20

- 1) Remove the battery ground cable.
- 2) Remove the steering column. <Ref. to DS-20 REMOVAL, Steering Column.>
- 3) Secure the steering column in a vise. Remove the bolt with a drill.

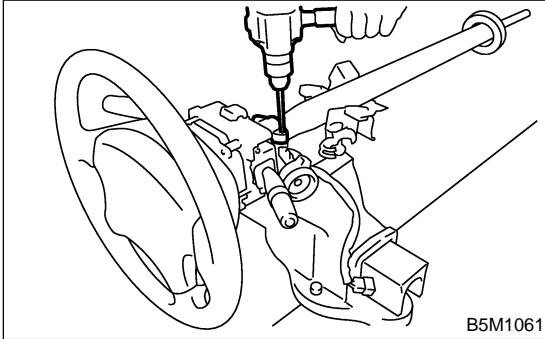

- 4) Remove the ignition key lock.
- 5) Use a new torn bolt. Tighten the torn bolt to the end of the thread.

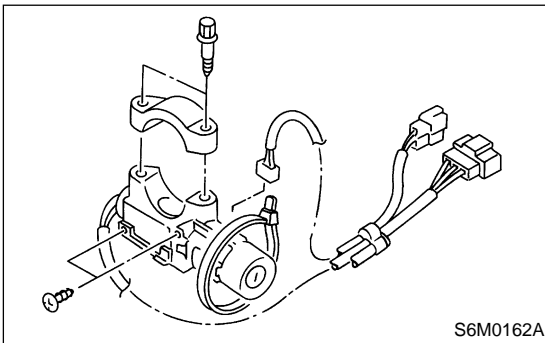

B: INSPECTION S909318A10

- 1) Remove the instrument panel lower cover.
- 2) Remove the lower column cover.
- 3) Unfasten the holddown clip which secures the harness and disconnect the connector of the ignition switch from the body harness.
- 4) Turn the ignition key plate to each position and check the continuity between the terminals of the ignition connector.

Switch position	Tester connection	Specified condition
LOCK		
ACC	No. 1 — No. 2	Continuity
ON	No. 1 — No. 2 — No. 4	Continuity
ST	No. 1 — No. 3 — No. 4	Continuity

If NG, replace the ignition switch.