

26. Keyless Transmitter S909325


A: REMOVAL S909325A18

1. TRANSMITTER BATTERY S909325A1801

Remove battery from transmitter.

NOTE:

To prevent static electricity damage to transmitter printed circuit board, touch steel area of building with hand to discharge static electricity carried on body or clothes before disassembling transmitter.

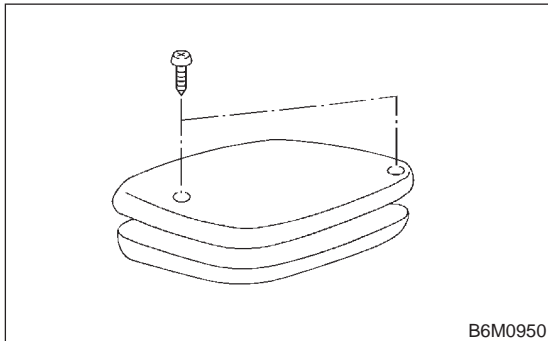

B6M0950

B: INSTALLATION S909325A11

1. TRANSMITTER BATTERY S909325A1101

Install in the reverse order of removal.


C: INSPECTION S909325A10

1. TRANSMITTER BATTERY S909325A1001

Measure voltage between battery (+) terminal and (-) terminal.

NOTE:

- Battery discharge occurs during measurement. Complete measurement within 5 seconds.
- During battery voltage measurement, voltage falls more than 1.8 volts in 3 seconds period.

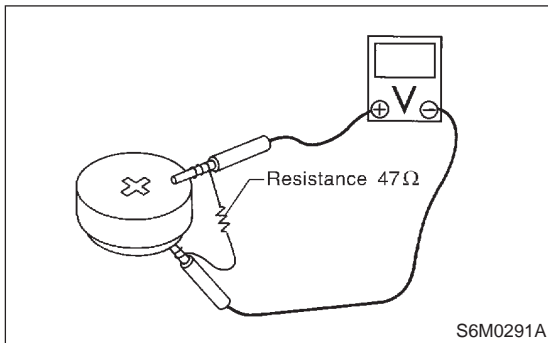

S6M0291A

Tester connection		Voltage (V)
(+)	(-)	
Battery (+) terminal	Battery (-) terminal	More than 2

If NG, replace the battery. (Use CR2032 or equivalent.)

D: REPLACEMENT S909325A20

1. TRANSMITTER PROGRAMMING S909325A2001

NOTE:

Perform programming when the transmitter is replaced and when an additional transmitter is required.

NOTE:

Finish operation from step 1) through 4) within 45 seconds.

- 1) Sit on the driver's seat and close all doors, rear gate and trunk lid.
- 2) Open the driver's door.
- 3) Close the driver's door.
- 4) Turn the ignition switch from ON to LOCK ten times within 15 seconds.

NOTE:

Do not start the engine at this time.

- 5) The horn chirps one time to indicate that the system has entered in the programming mode.
- 6) Open the driver's door.
- 7) Close the driver's door.
- 8) Press any button on the transmitter that you wish to program into the system.
- 9) Horn will chirp two times to indicate that the transmitter has been programmed.

NOTE:

Any additional transmitter can also be programmed at this time. Repeat steps 6) through 9) for an additional transmitter.

10) Remove the ignition key from the ignition switch.

11) The horn will chirp three times to indicate that the system has exited the programming mode.

12) Check the keyless entry system properly operates by operating each transmitter.

KEYLESS TRANSMITTER

Security and Locks

MEMO: