


## 7. Front Wiper Motor and Link


S902406

### A: REMOVAL S902406A18

- 1) Remove cowl panel. <Ref. to EI-27 REMOVAL, Cowl Panel.>
- 2) Disconnect wiper motor connector.
- 3) Loosen bolts and nuts to remove wiper link.

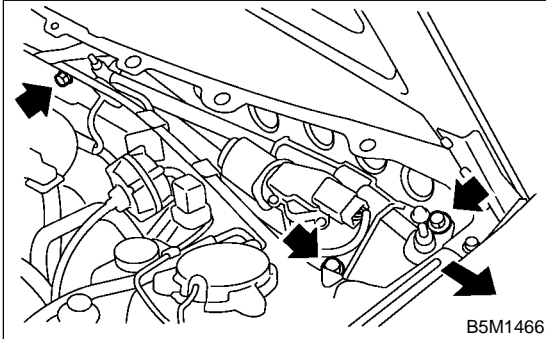

- 4) Loosen bolts and nut to remove motor.

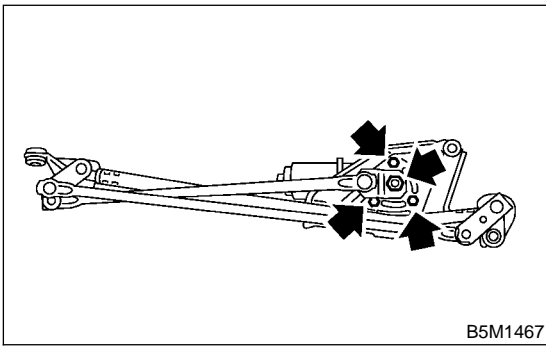


### B: INSTALLATION S902406A11


Install in the reverse order of removal.

### C: INSPECTION S902406A10


- 1) When battery is connected to terminal of connectors, confirm that motor operates at low speed.

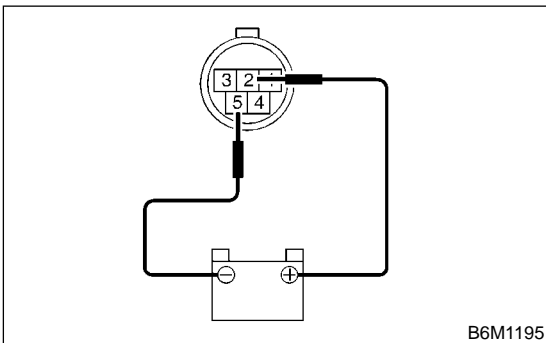

- 2) When battery is connected to terminal of connectors, confirm that motor operates at high speed.

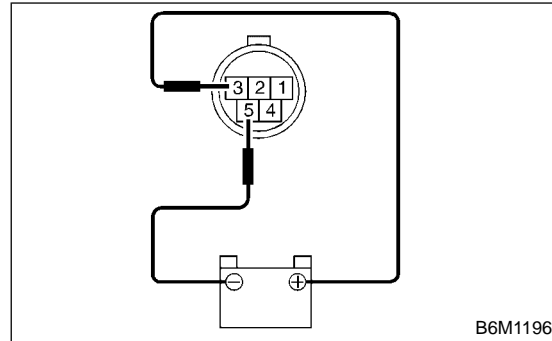

- 3) Connect battery to terminals of connector, and remove terminal connection with motor rotated at low speed, and stop wiper motor through operation.

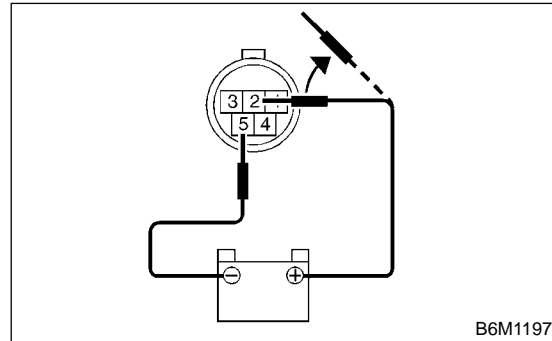

- 4) Connect battery and confirm that motor stops at automatic stop position after motor operates at low speed again.

