


15. Brake Hose S405164

A: REMOVAL S405164A18

1. FRONT BRAKE HOSE S405164A1801

- 1) Separate brake pipe from brake hose.
(Always use flare nut wrench and be careful not to deform flare nut.)

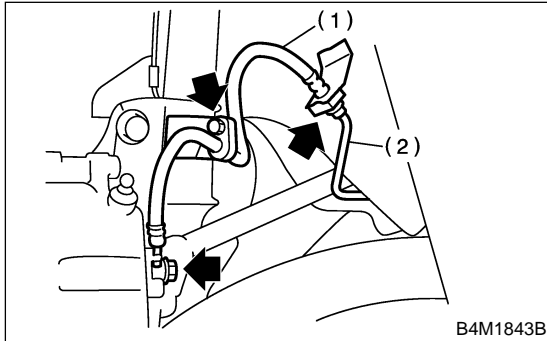

- (1) Brake hose
- (2) Brake pipe


- 2) Pull out clamp to remove brake hose.
- 3) Remove bolt at strut and union bolt.

2. REAR BRAKE HOSE S405164A1802


- 1) Separate brake pipe from brake hose.

NOTE:

Always use flare nut wrench and be careful not to deform flare nut.

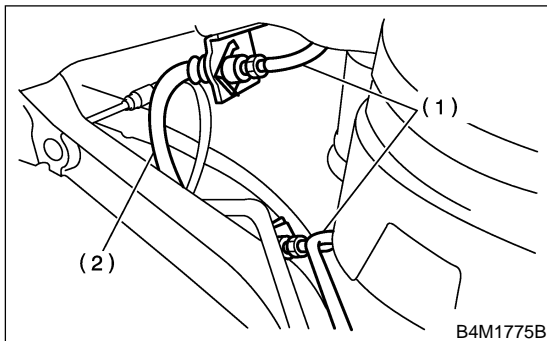

- (1) Brake pipe
- (2) Brake hose

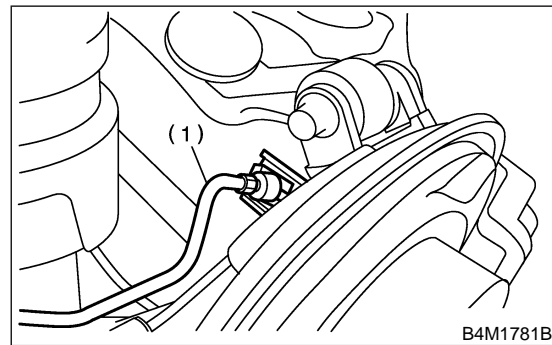

- (1) Brake pipe
- 2) Pull out clamp to remove brake hose.

BRAKE HOSE


Brake

B: INSTALLATION S405164A11

1. FRONT BRAKE HOSE S405164A1101

- 1) Route end of brake hose (on caliper side) through hole in brake hose bracket at strut location.
- 2) Tighten end of brake hose at caliper using a union bolt.

Tightening torque (Union bolt):
18 N·m (1.8 kgf-m, 13.0 ft-lb)

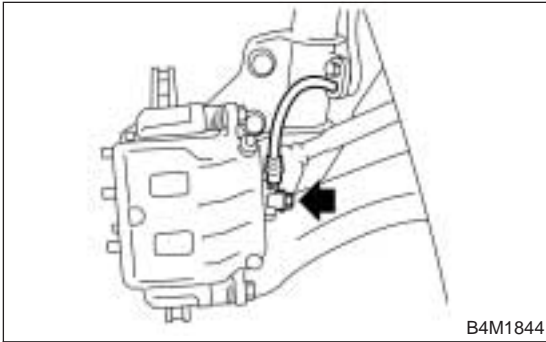

- 3) Secure middle fitting of brake hose to bracket at strut location using a clamp.
- 4) Position disc in straight-forward direction and route brake hose through hole in bracket on wheel apron side.

CAUTION:

Be sure brake hose is not twisted.

- 5) Temporarily tighten flare nut to connect brake pipe and hose.
- 6) Fix brake hose with clamp at wheel apron bracket.
- 7) While holding hexagonal part of brake hose fitting with a wrench, tighten flare nut to the specified torque.


Tightening torque (Brake pipe flare nut):
15 N·m (1.5 kgf-m, 10.8 ft-lb)

- 8) Bleed air from the brake system.


2. REAR BRAKE HOSE S405164A1102

- 1) Pass brake hose through the hole of bracket, and lightly tighten flare nut to connect brake pipe.
- 2) Insert clamp upward to fix brake hose.
- 3) While holding hexagonal part of brake hose fitting with a wrench, tighten flare nut to the specified torque.

Tightening torque (Brake pipe flare nut):
15 N·m (1.5 kgf-m, 10.8 ft-lb)

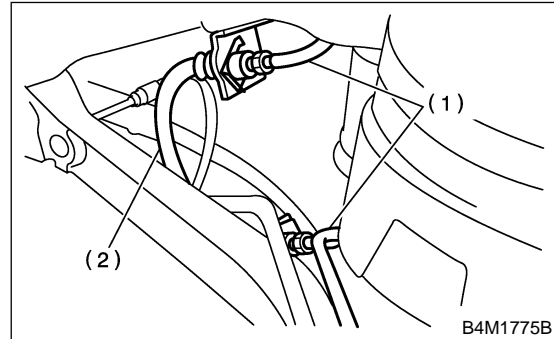

- (1) Brake pipe
- (2) Brake hose

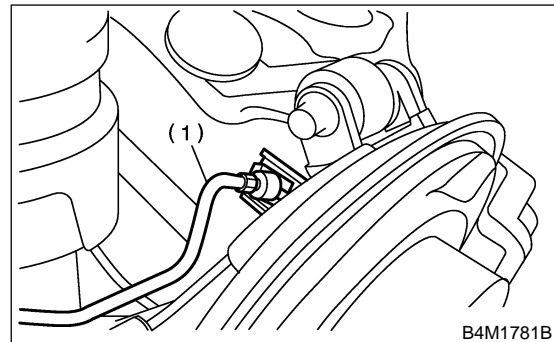

- (1) Brake pipe

- 4) Bleed air from the brake system.

C: INSPECTION S405164A10

Ensure there are no cracks, breakage, or damage on hoses. Check joints for fluid leakage. If any cracks, breakage, damage or leakage is found, repair or replace hose.