

## 16. Brake Pipe S405165

### A: REMOVAL S405165A18

**NOTE:**

Airbag system wiring harness is routed near the center brake pipe.

**CAUTION:**

- All Airbag system wiring harness and connectors are colored yellow. Do not use electrical test equipment on these circuits.
- Be careful not to damage Airbag system wiring harness when servicing the center brake pipe.
- When removing the brake pipe, make sure that it is not bent.

### B: INSTALLATION S405165A11

**NOTE:**

Airbag system wiring harness is routed near the center brake pipe.

**CAUTION:**

- All Airbag system wiring harness and connectors are colored yellow. Do not use electrical test equipment on these circuits.
- Be careful not to damage Airbag system wiring harness when servicing the center brake pipe.
- When installing the brake pipe, make sure that it is not bent.
- After installing the brake pipe and hose, bleed the air.
- After installing the brake hose, make sure that it does not touch the tire or suspension assembly, etc.

***Brake pipe tightening torque:  
15 N·m (1.5 kg-m, 10.8 ft-lb)***

## **C: INSPECTION** S405165A10

Ensure there are no cracks, breakage, or damage on pipes. Check joints for fluid leakage. If any cracks, breakage, damage or leakage is found, repair or replace pipe.

### **NOTE:**

Use a mirror when inspecting low-visible part or back side.