

11. Read Diagnostic Trouble Code S008508

A: OPERATION S008508A16

1. SUBARU SELECT MONITOR (NORMAL MODE) S008508A1601

- 1) On the «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
- 2) On the «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
- 3) Press the [YES] key after displayed the information of engine type.
- 4) On the «Engine Diagnosis» display screen, select the {Diagnostic Code(s) Display} and press the [YES] key.
- 5) On the «Diagnostic Code(s) Display» display screen, select the {Current Diagnostic Code(s)} or {History Diagnostic Code(s)} and press the [YES] key.

NOTE:

- For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.
- For detailed concerning diagnostic trouble codes, refer to the List of Diagnostic Trouble Code (DTC).
 - MT vehicles: <Ref. to EN(H4)-99 List of Diagnostic Trouble Code (DTC) for MT Vehicles.>
 - AT vehicles: <Ref. to EN(H4)-301 List of Diagnostic Trouble Code (DTC) for AT Vehicles.>

2. SUBARU SELECT MONITOR (OBD MODE) S008508A1602

- 1) On the «Main Menu» display screen, select the {2. Each System Check} and press the [YES] key.
- 2) On the «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
- 3) Press the [YES] key after displayed the information of engine type.
- 4) On the «Engine Diagnosis» display screen, select the {OBD System} and press the [YES] key.
- 5) On the «OBD Menu» display screen, select the {Diagnosis Code(s) Display} and press the [YES] key.
- 6) Make sure that a diagnostic trouble code (DTC) is shown on the display screen.

NOTE:

- For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.

- For detailed concerning diagnostic trouble codes, refer to the List of Diagnostic Trouble Code (DTC).

- MT vehicles: <Ref. to EN(H4)-99 List of Diagnostic Trouble Code (DTC) for MT Vehicles.>
- AT vehicles: <Ref. to EN(H4)-301 List of Diagnostic Trouble Code (DTC) for AT Vehicles.>

3. OBD-II GENERAL SCAN TOOL S008508A1603

Refers to data denoting emission-related powertrain diagnostic trouble codes.

For details concerning diagnostic trouble codes, refer to the List of Diagnostic Trouble Code (DTC).

- MT vehicles: <Ref. to EN(H4)-99 List of Diagnostic Trouble Code (DTC) for MT Vehicles.>
- AT vehicles: <Ref. to EN(H4)-301 List of Diagnostic Trouble Code (DTC) for AT Vehicles.>

NOTE:

Refer to OBD-II general scan tool manufacturer's instruction manual to access emission-related powertrain diagnostic trouble codes (MODE \$03).