

COMPULSORY VALVE OPERATION CHECK MODE

Engine (DIAGNOSTICS)

14. Compulsory Valve Operation Check Mode

S008528

2) Connect diagnosis cable to Subaru Select Monitor.


A: OPERATION

S008528A16

1. SUBARU SELECT MONITOR

S008528A1601

1) Prepare Subaru Select Monitor kit.

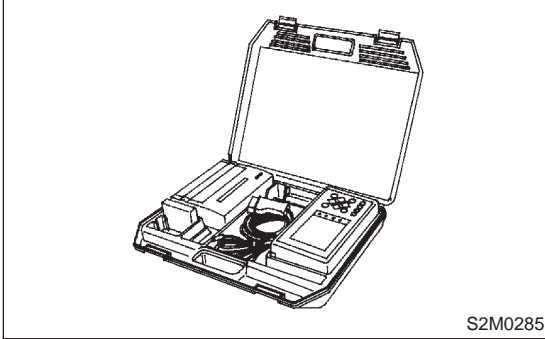

● A list of the support data is shown in the following table.

| Contents | Display |
|--|-----------------------------|
| Compulsory fuel pump relay operation check | Fuel Pump Relay |
| Compulsory radiator fan relay operation check | Radiator Fan Relay |
| Compulsory air conditioning relay operation check | A/C Relay |
| Compulsory pressure control solenoid valve operation check | PCV Solenoid Valve |
| Compulsory drain valve operation check | Vent Control Solenoid Valve |

NOTE:

- Because ASV solenoid valve, FICD solenoid valve and air injection system diagnosis solenoid valve are not installed, ASV Solenoid Valve, FICD Solenoid Valve and Pressure Switching Sol.2 will be displayed but non-functional.
- For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.

COMPULSORY VALVE OPERATION CHECK MODE

Engine (DIAGNOSTICS)

MEMO: