


8. Radiator Sub Fan and Fan Motor

S106074


A: REMOVAL

S106074A18


- 1) Disconnect battery ground cable.

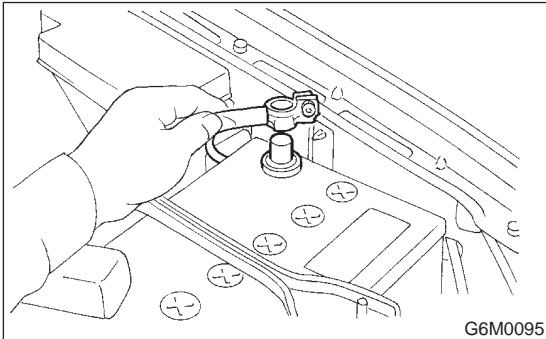


- 2) Lift-up the vehicle.
- 3) Remove under cover.

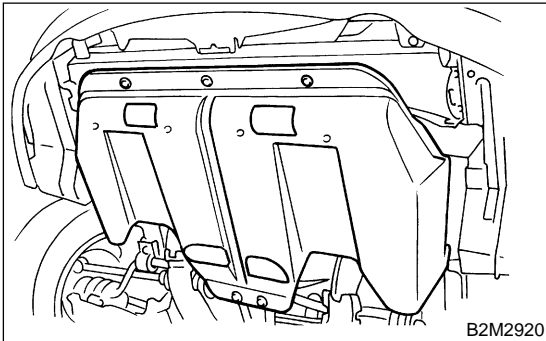


- 4) Disconnect connector of sub fan motor.

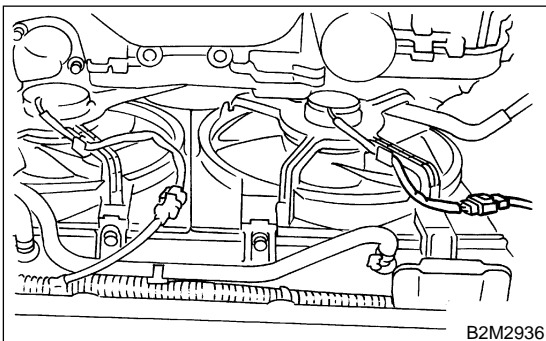

- 5) Lower the vehicle.
- 6) Remove air intake duct.

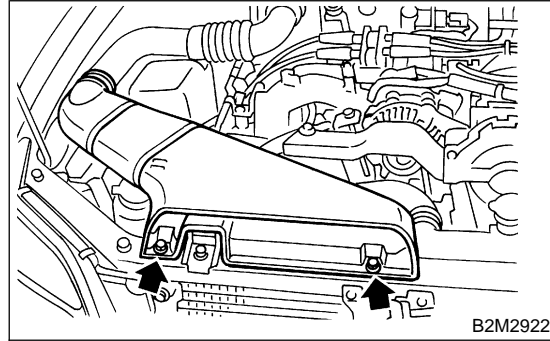

- 7) Remove bolts which hold sub fan shroud to radiator.
- 8) Remove radiator sub fan shroud through the under side of vehicle.

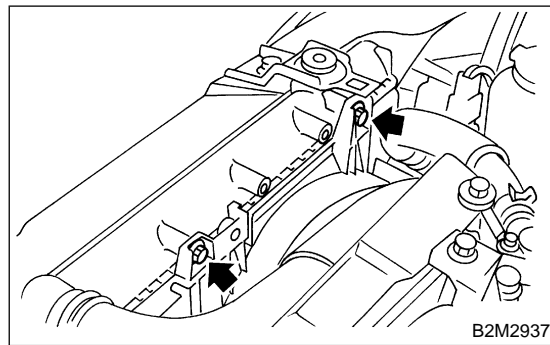


B: INSTALLATION

S106074A11

Install in the reverse order of removal.

Tightening torque:

4.9 N·m (0.50 kgf-m, 3.6 ft-lb)

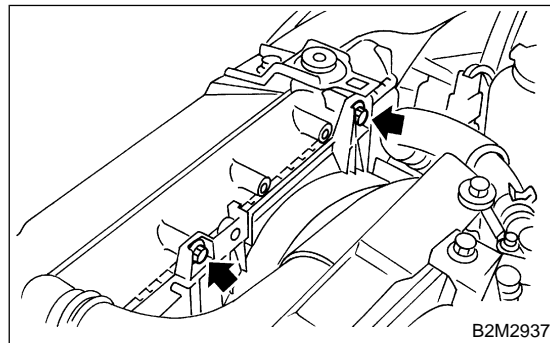


RADIATOR SUB FAN AND FAN MOTOR

Cooling


C: DISASSEMBLY S106074A06

1) Remove clip which holds motor harness onto shroud.

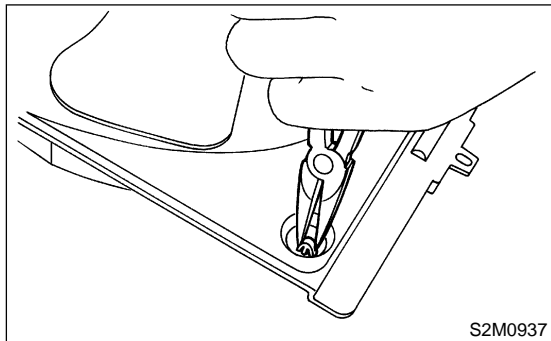


S2M0937

2) Remove nut which holds fan itself onto fan motor and shroud assembly.

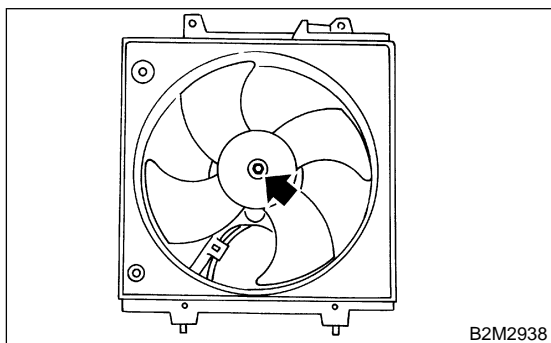

B2M2938

3) Remove bolts which install fan motor onto shroud.

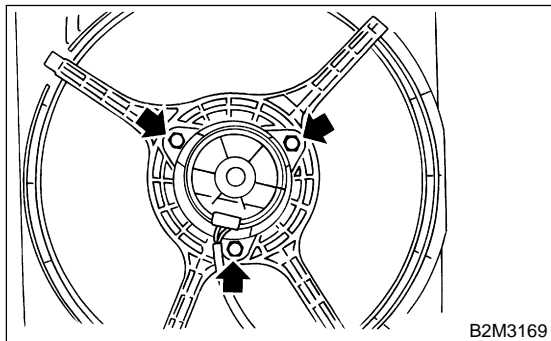


B2M3169

D: ASSEMBLY S106074A02


Assemble in the reverse order of disassembly.

Tightening torque:
4.4 N·m (0.45 kgf-m, 3.3 ft-lb)

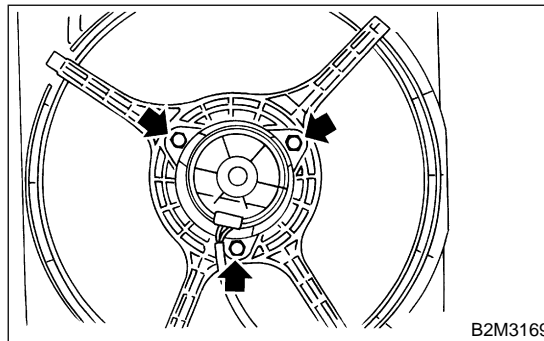

B2M3169


Tightening torque:
3.4 N·m (0.35 kgf-m, 2.5 ft-lb)

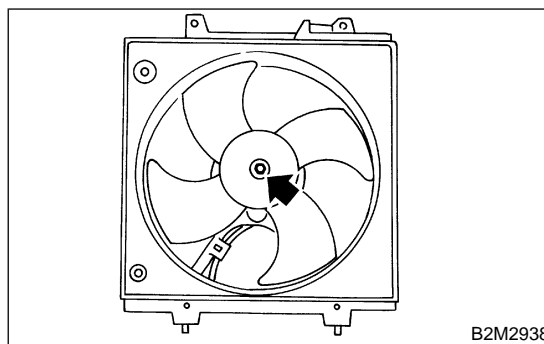

B2M2938

E: INSPECTION S106074A10

- 1) Connect battery positive (+) terminal to terminal No. 2, and negative (-) terminal to terminal No. 1 of sub fan motor connector.
- 2) Make sure the sub-fan motor operates properly. Replace it if it doesn't.

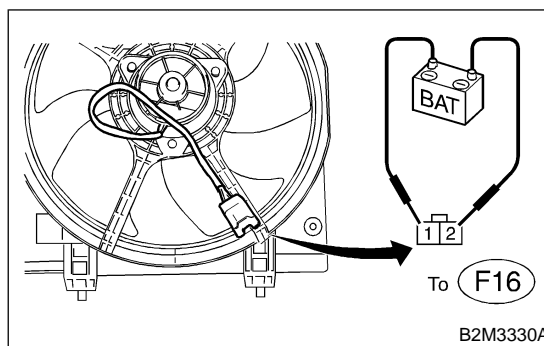

B2M3330A