


REAR CATALYTIC CONVERTER

Emission Control (Aux. Emission Control Devices)

3. Rear Catalytic Converter S110036

A: REMOVAL S110036A18


The front and rear catalytic converter and center exhaust pipe are integrated into one unit. Therefore, the removal and installation procedures are the same as the those for the front catalytic converter. <Ref. to EC(H4)-3 REMOVAL, Front Catalytic Converter.>

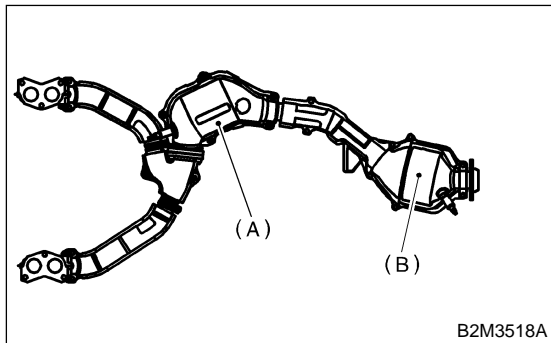

- (A) Front catalytic converter
- (B) Rear catalytic converter

B: INSTALLATION S110036A11

The front and rear catalytic converter and center exhaust pipe are integrated into one unit. Therefore, the removal and installation procedures are the same as the ones described under front catalytic converter. <Ref. to EC(H4)-4 INSTALLATION, Front Catalytic Converter.>

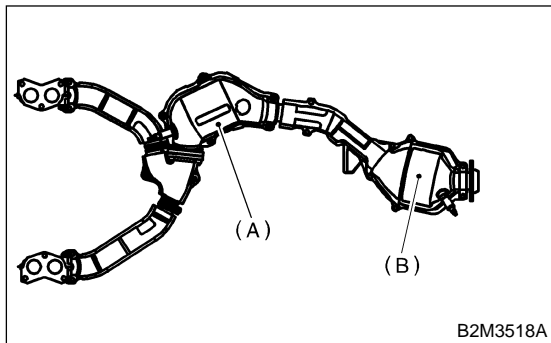

- (A) Front catalytic converter
- (B) Rear catalytic converter

C: INSPECTION S110036A10

- 1) Make sure there are no exhaust leaks from connections and welds.
- 2) Make sure there are no holes or rusting.