

MAIN FUEL LEVEL SENSOR

Emission Control (Aux. Emission Control Devices)

6. Main Fuel Level Sensor S110038

A: REMOVAL S110038A18

For work procedures, refer to "FU" section. <Ref. to FU(H4)-93 REMOVAL, Fuel Lever Sensor.>

B: INSTALLATION S110038A11

For work procedures, refer to "FU" section. <Ref. to FU(H4)-93 INSTALLATION, Fuel Lever Sensor.>