

SUB FUEL LEVEL SENSOR

Emission Control (Aux. Emission Control Devices)

8. Sub Fuel Level Sensor S110029

A: REMOVAL S110029A18

For work procedures, refer to "FU(H4)" section.
<Ref. to FU(H4)-94 REMOVAL, Fuel Sub Lever Sensor.>

B: INSTALLATION S110029A11

For work procedures, refer to "FU(H4)" section.
<Ref. to FU(H4)-95 INSTALLATION, Fuel Sub Lever Sensor.>