

3. Center Exhaust Pipe S102067

A: REMOVAL S102067A18

After removing the center and front exhaust pipes as one unit, separate them. Refer to the procedure for removing the front exhaust pipe. <Ref. to EX(H4)-5 REMOVAL, Front Exhaust Pipe.>

B: INSTALLATION S102067A11

Install the center exhaust pipe and front exhaust pipe as one unit. Refer to the procedure for installing the front exhaust pipe. <Ref. to EX(H4)-6 INSTALLTION, Front Exhaust Pipe.>

C: INSPECTION S102067A10

- 1) Make sure there are no exhaust leaks from connections and welds.
- 2) Make sure there are no holes or rusting.