


4. Rear Exhaust Pipe S102068

A: REMOVAL S102068A18

1) Separate rear exhaust pipe from center exhaust pipe.

CAUTION:


Be careful, exhaust pipe is hot.

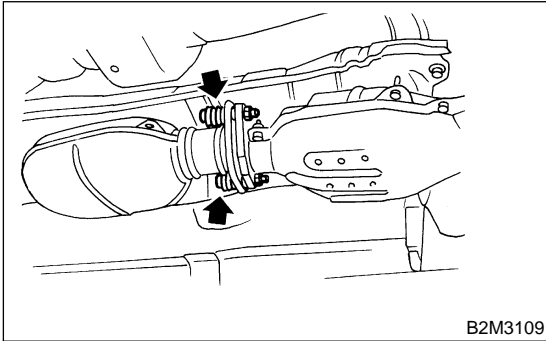

2) Separate rear exhaust pipe from muffler.

CAUTION:

Be careful not to pull down rear exhaust pipe.

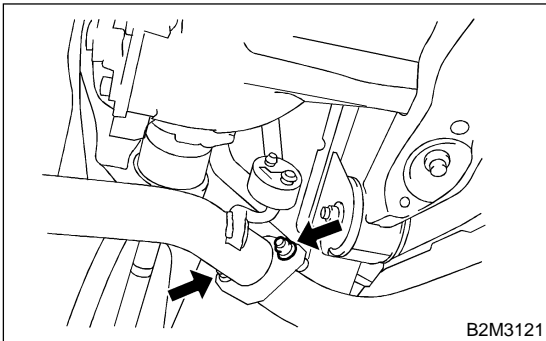

3) Remove rear exhaust pipe.

B: INSTALLATION S102068A11


CAUTION:

Replace gaskets with new ones.

1) Install rear exhaust pipe to muffler.

Tightening torque:


48 N·m (4.9 kgf-m, 35.4 ft-lb)

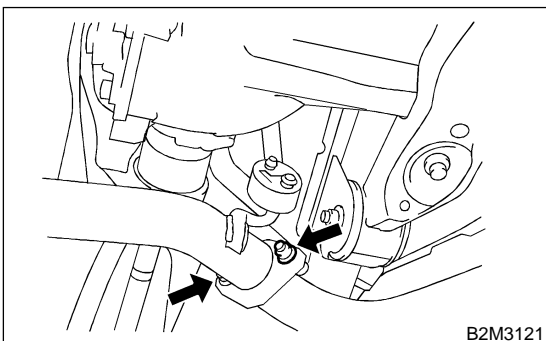

2) Install rear exhaust pipe to center exhaust pipe.

Tightening torque:

18 N·m (1.8 kgf-m, 13.0 ft-lb)

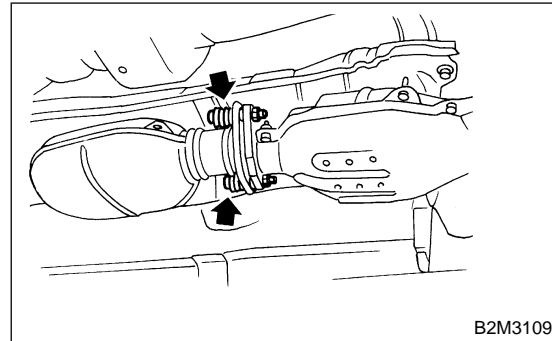

C: INSPECTION S102068A10

1) Make sure there are no exhaust leaks from connections and welds.

2) Make sure there are no holes or rusting.

3) Make sure the cushion rubber is not worn or cracked.