


## 5. Crankshaft Position Sensor


S105043

### A: REMOVAL S105043A18


- 1) Disconnect battery ground cable.

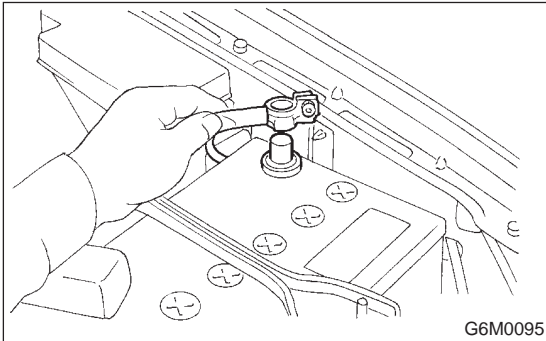

- 2) Remove bolt which install crankshaft position sensor to cylinder block.

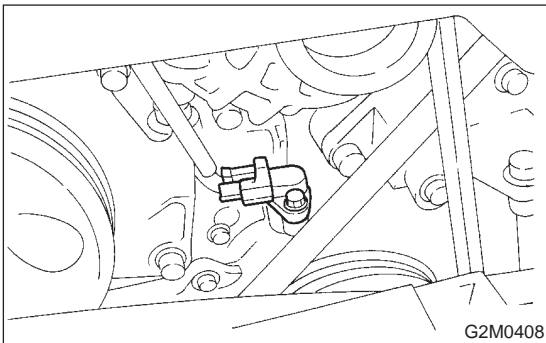

- 3) Remove crankshaft position sensor, and disconnect connector from it.

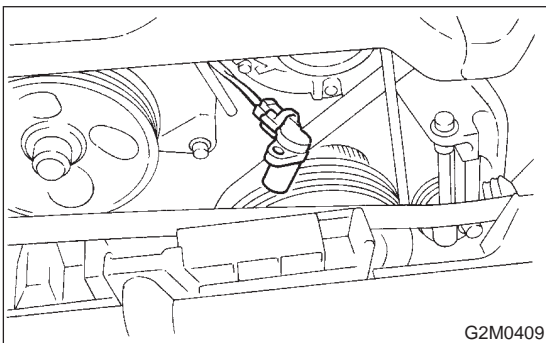

### B: INSTALLATION S105043A11

Install in the reverse order of removal.

**Tightening torque:**

**T: 6.4 N·m (0.65 kgf·m, 4.7 ft·lb)**

