



## 7. Knock Sensor S105042

### A: REMOVAL S105042A18


- 1) Disconnect battery ground cable from battery ground terminal.

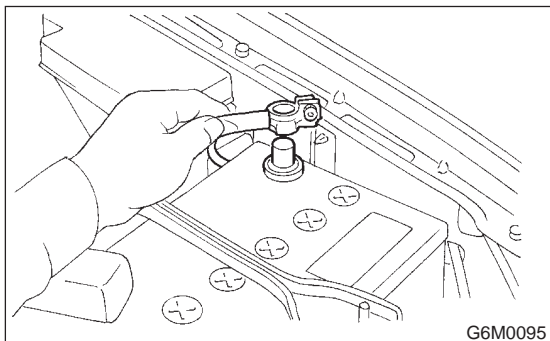


- 2) Remove air cleaner case.

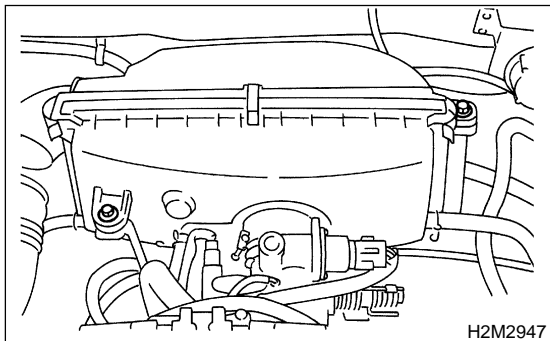

- 3) Disconnect knock sensor connector.

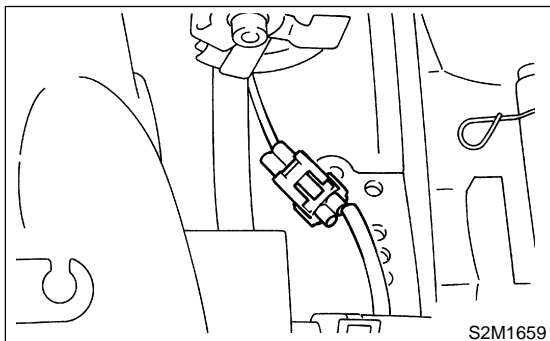

- 4) Remove knock sensor from cylinder block.

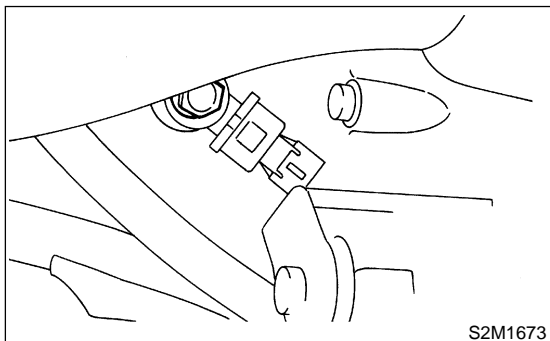

### B: INSTALLATION S105042A11


- 1) Install knock sensor to cylinder block.

**Tightening torque:**


**24 N·m (2.4 kgf·m, 17.4 ft·lb)**

**NOTE:**


The extraction area of the knock sensor cord must be positioned at a 45° angle relative to the engine rear.

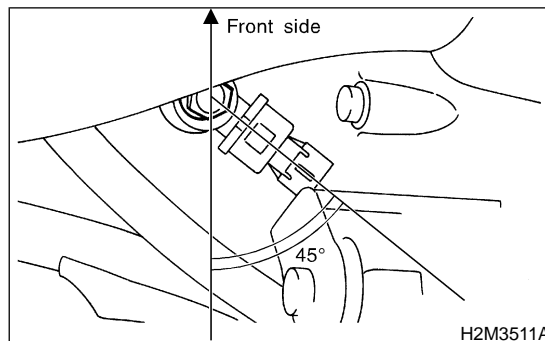

- 2) Connect knock sensor connector.

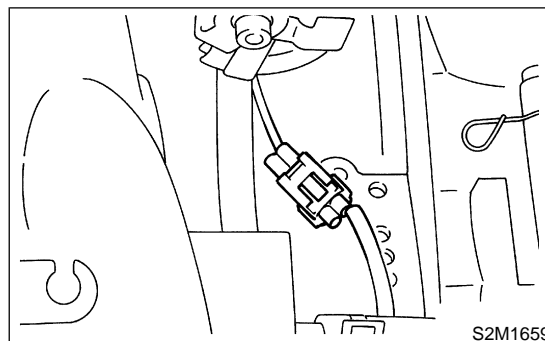

- 3) Install air cleaner case.

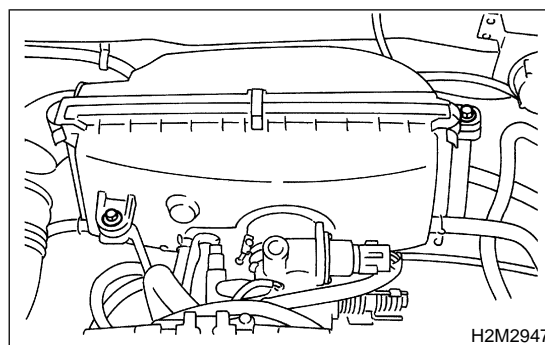


# KNOCK SENSOR

Fuel Injection (Fuel Systems)

---

4) Connect battery ground cable.

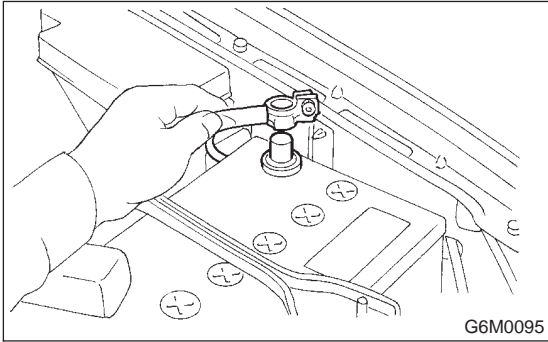

FU(H4)-44