

INTAKE AIR TEMPERATURE AND PRESSURE SENSOR

Fuel Injection (Fuel Systems)


11. Intake Air Temperature and Pressure Sensor S105044

A: REMOVAL S105044A18


NOTE:

This sensor is installed on AT vehicles only.


- 1) Disconnect battery ground cable.

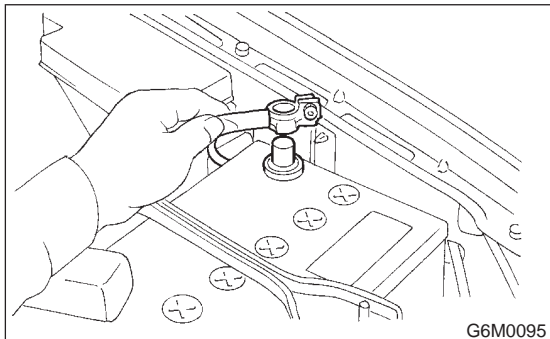


- 2) Disconnect spark plug cord from ignition coil and ignitor assembly.

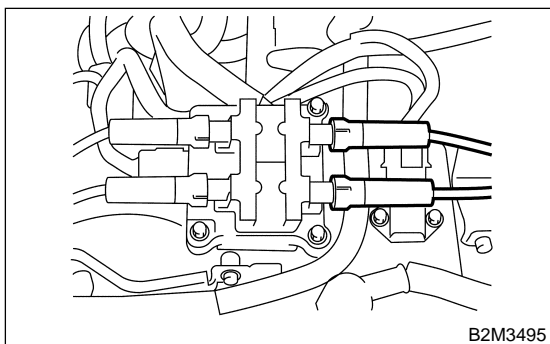

- 3) Disconnect connector from intake air temperature and pressure sensor.

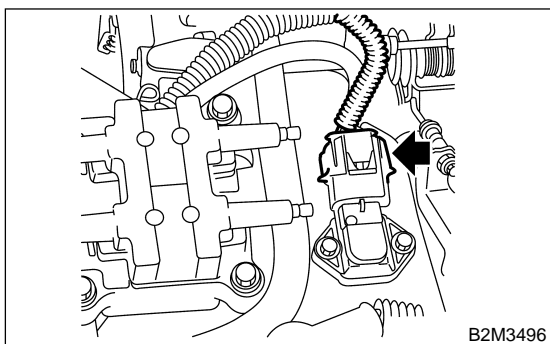

- 4) Remove intake air temperature and pressure sensor.

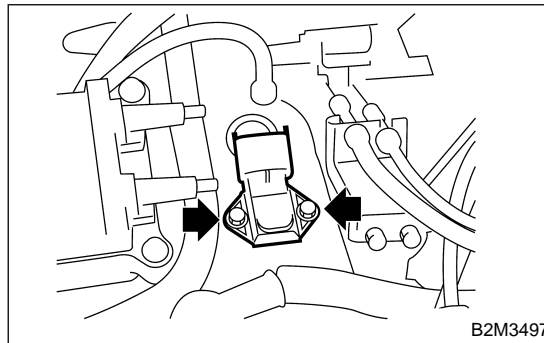


B: INSTALLATION S105044A11

Install in the reverse order of removal.

Tightening torque:

3.4 N·m (0.35 kgf·m, 2.5 ft·lb)

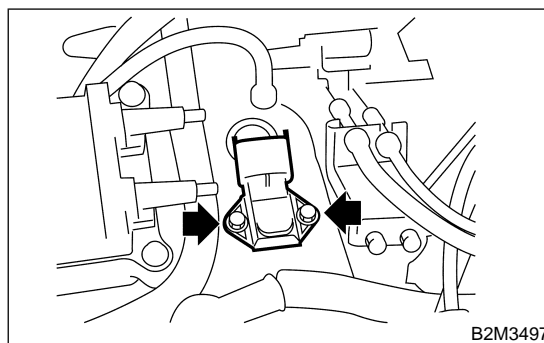

CAUTION:

Replace O-ring with new one.

