

13. Idle Air Control Solenoid Valve

S105056


A: REMOVAL

S105056A18


1. MT VEHICLES

S105056A1801


- 1) Disconnect battery ground cable.

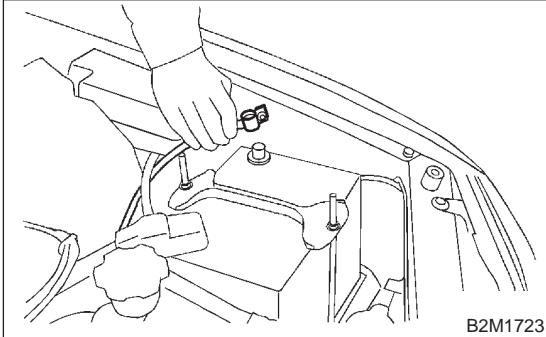


- 2) Disconnect connector from idle air control solenoid valve.

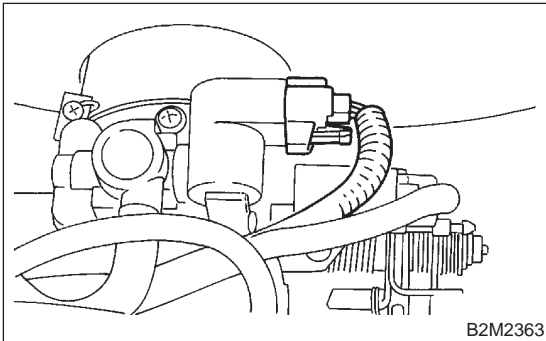

- 3) Disconnect air by-pass hose (A) from idle air control solenoid valve.

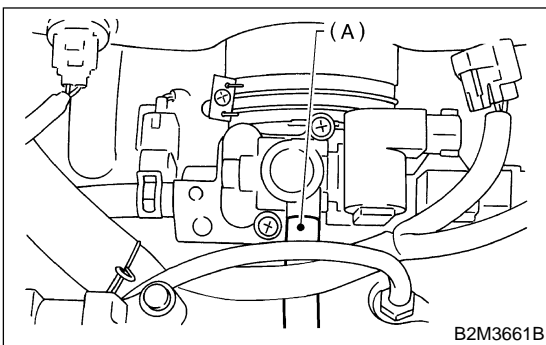


- 4) Remove idle air control solenoid valve from throttle body.

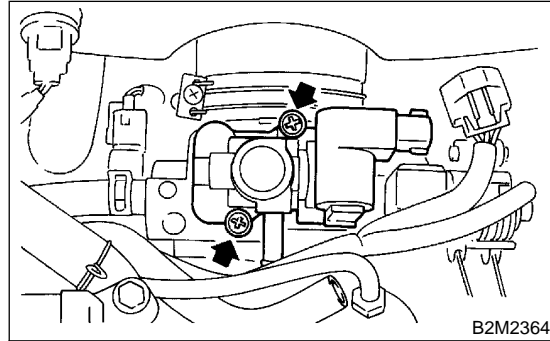


2. AT VEHICLES

S105056A1802


- 1) Disconnect battery ground cable.

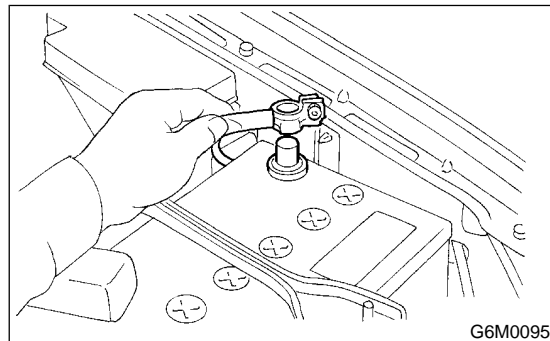

- 2) Disconnect connector from idle air control solenoid valve.

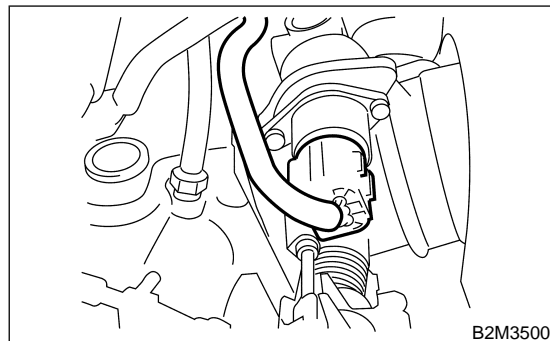

- 3) Remove idle air control solenoid valve from throttle body.

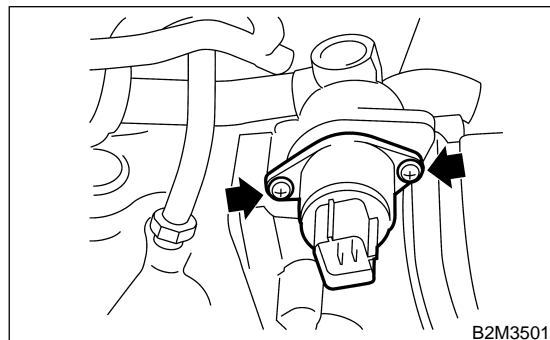

IDLE AIR CONTROL SOLENOID VALVE

Fuel Injection (Fuel Systems)

B: INSTALLATION S105056A11

1. MT VEHICLES S105056A1101


Install in the reverse order of removal.

CAUTION:

Replace gasket with a new one.

Tightening torque:

2.8 N·m (0.29 kgf·m, 2.1 ft·lb)

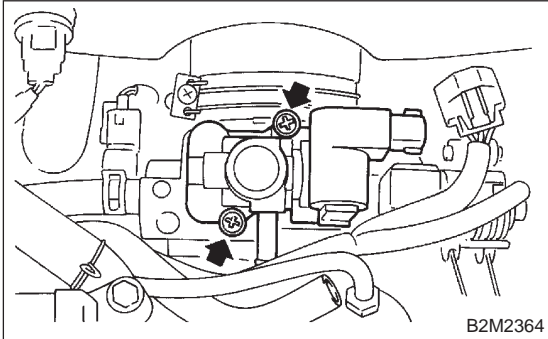

2. AT VEHICLES S105056A1102

Install in the reverse order of removal.

CAUTION:

Always use new gasket.

Tightening torque:

1.6 N·m (0.16 kgf·m, 1.2 ft·lb)

