


27. Fuel Filter S105027

A: REMOVAL S105027A18

WARNING:

- Place “NO FIRE” signs near the working area.
- Be careful not to spill fuel on the floor.

- 1) Release fuel pressure. <Ref. to FU(H4)-70 RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
- 2) Disconnect fuel delivery hoses from fuel filter.

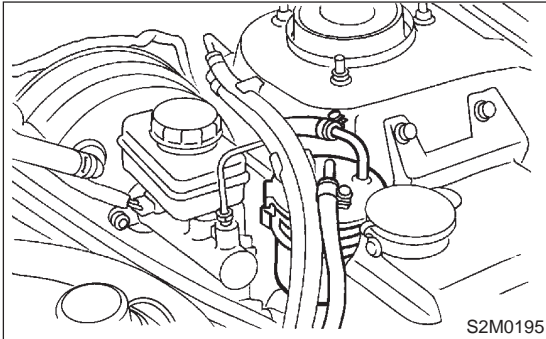

- 3) Remove filter from holder.

B: INSTALLATION S105027A11


CAUTION:

- If fuel hoses are damaged at the connecting portion, replace it with a new one.
- If clamps are badly damaged, replace with new ones.

- 1) Install in the reverse order of removal.
- 2) Tighten hose clamp screws.

Tightening torque:

1.0 N·m (0.1 kgf·m, 0.7 ft·lb)

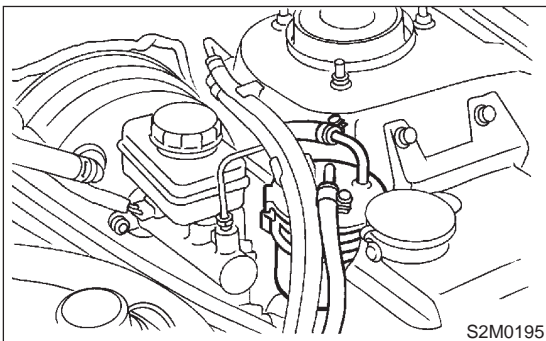

C: INSPECTION S105027A10

- 1) Check the inside of fuel filter for dirt and water sediment.
- 2) If it is clogged, or if replacement interval has been reached, replace it.
- 3) If water is found in it, shake and expel the water from inlet port.