


AIR CLEANER CASE

Intake (Induction)


3. Air Cleaner Case S104089

A: REMOVAL S104089A18


- 1) Disconnect battery ground cable.

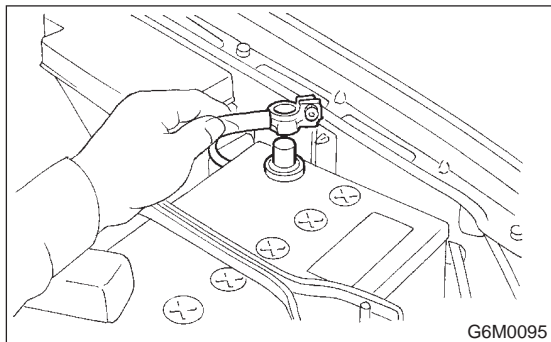


- 2) Disconnect connector from intake air temperature sensor. (MT vehicles)

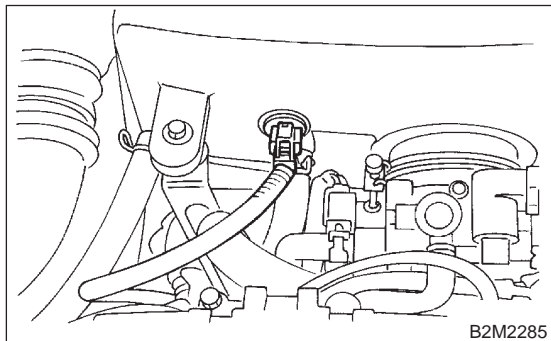

- 3) Loosen clamp which connects air cleaner case to throttle body.

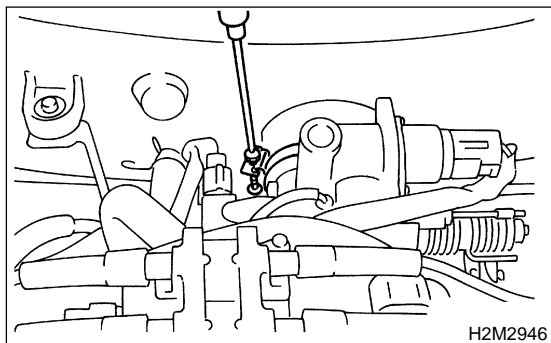

- 4) Disconnect hoses from air cleaner case.
- 5) Remove bolts which install air cleaner case to stays.

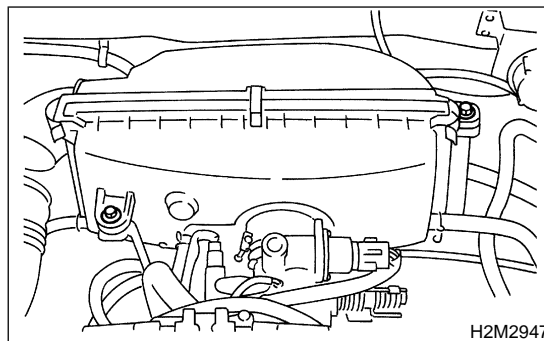

- 6) Remove air cleaner case.

B: INSTALLATION S10489A11

Install in the reverse order of removal.

C: INSPECTION S104089A10

Inspect for cracks and loose connections.