


RESONATOR CHAMBER

Intake (Induction)

5. Resonator Chamber S104639

A: REMOVAL S104639A18


- 1) Remove air intake duct. <Ref. to IN(H4)-7 REMOVAL, Air Intake Duct.>
- 2) Remove resonator chamber.

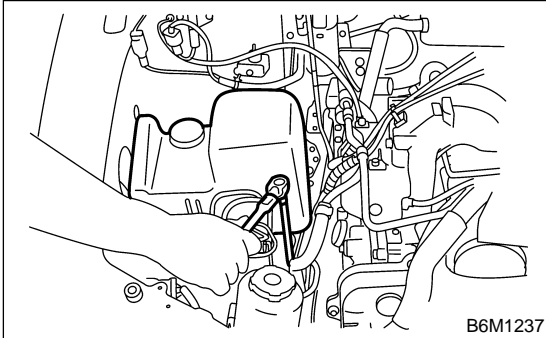

B: INSTALLATION S104639A11

Install in the reverse order of removal.

Tightening torque:
33 N·m (3.4 kgf-m, 24.6 ft-lb)

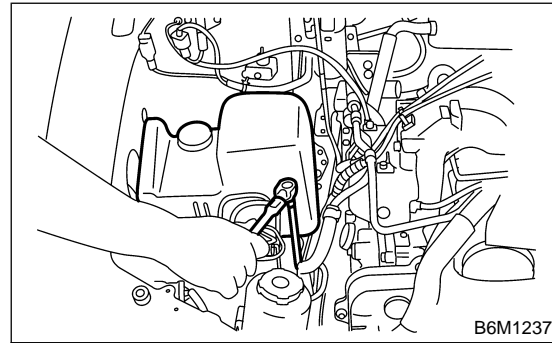

C: INSPECTION S104639A10

Inspect for cracks and loose connections.