

10. Engine Mounting S103085

A: REMOVAL S103085A18

- 1) Remove engine assembly. <Ref. to ME(H4)-33 REMOVAL, Engine Assembly.>
- 2) Remove engine mounting from engine assembly.

B: INSTALLATION S103085A11

Install in the reverse order of removal.

Tightening torque:

Engine mounting;

34 N·m (3.5 kgf-m, 25.3 ft-lb)

C: INSPECTION S103085A10

Make sure there are no cracks or other damage.