


14. Belt Cover S103582

A: REMOVAL S103582A18

- 1) Remove V-belt. <Ref. to ME(H4)-43 REMOVAL, V-belt.>
- 2) Remove crankshaft pulley. <Ref. to ME(H4)-44 REMOVAL, Crankshaft Pulley.>
- 3) Remove belt cover (LH).
- 4) Remove front belt cover.

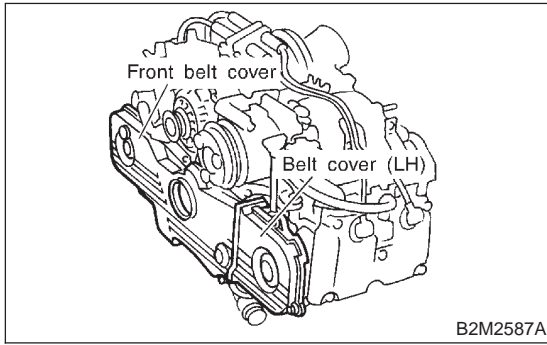

B: INSTALLATION S103582A11

- 1) Install front belt cover.


Tightening torque:

5 N·m (0.5 kgf·m, 3.6 ft·lb)

- 2) Install belt cover (LH).

Tightening torque:

5 N·m (0.5 kgf·m, 3.6 ft·lb)

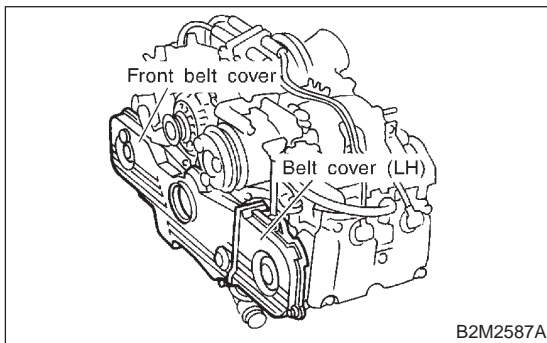

- 3) Install crankshaft pulley. <Ref. to ME(H4)-44 INSTALLATION, Crankshaft Pulley.>
- 4) Install V-belt. <Ref. to ME(H4)-43 INSTALLATION, V-belt.>

C: INSPECTION S103582A10

Make sure the cover is not damaged.