


10. Heater Core S701554

A: REMOVAL S701554A18

- 1) Remove heater unit. <Ref. to AC-25 REMOVAL, Heater Unit.>
- 2) Remove screws to separate heater unit case.
- 3) Remove heater core.

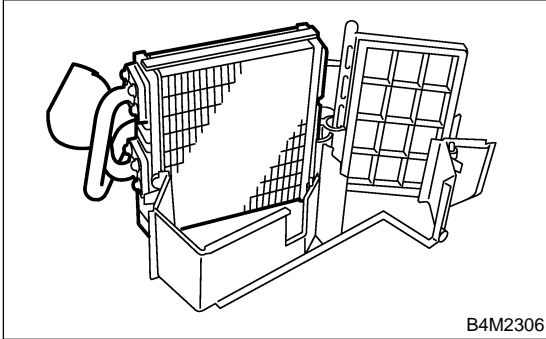

B: INSTALLATION S701554A11

Install in the reverse order of removal.