
14. Receiver Drier ST01283

A: REMOVAL S701283A18

- 1) Disconnect ground cable from battery.
- 2) Using refrigerant recovery system, discharge refrigerant. <Ref. to AC-18 OPERATION, Refrigerant Recovery Procedure.>
- 3) Disconnect pressure switch harness (A).
- 4) Disconnect pipe (B).
- 5) Loosen mounting bolts (C) to remove receiver drier.

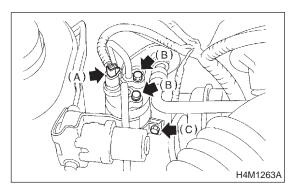

CAUTION:

The receiver drier contains a desiccant. After disconnecting receiver drier, plug it to avoid moisture.

If receiver drier is replaced, add appropriate amount of compressor oil to the compressor. <Ref. to AC-24 REPLACEMENT, Compressor Oil.>

B: INSTALLATION S701283A11

1) Install in the reverse order of removal.

CAUTION:

Replace O-rings with new ones, and apply compressor oil.

2) Charge refrigerant. <Ref. to AC-19 OPERATION, Refrigerant Charging Procedure.>