


## 21. Sun-load Sensor (Auto A/C)


S701279

### A: REMOVAL S701279A18

- 1) Disconnect ground cable from battery.
- 2) Insert a slotted screwdriver to remove sunload sensor.

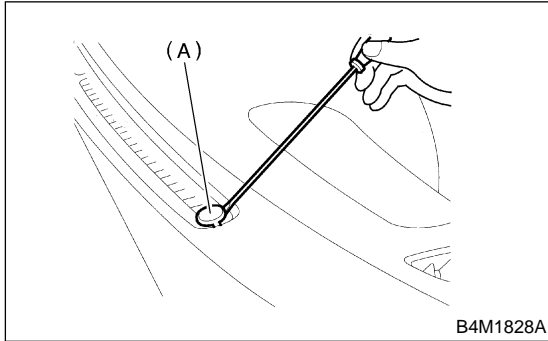

- 3) Disconnect sunload sensor connector.

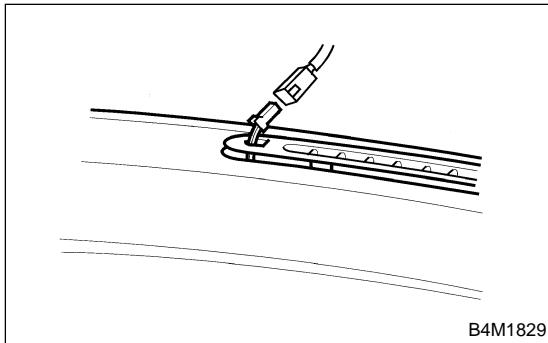

### CAUTION:

Be careful not to damage sensors and interior trims when removing them.

### B: INSTALLATION S701279A11

Install in the reverse order of removal.

### C: INSPECTION S701279A10

<Ref. to AC-32 TROUBLE CODE 25 OR -25 (SUN-LOAD SENSOR), Diagnostic Procedure with Trouble Code.>