

SCHMATIC DIAGRAMS


Emission Control (Aux. Emission Control Devices)

- | | |
|--|--|
| (1) Engine control module (ECM) | (23) Radiator fan relay |
| (2) Ignition coil and ignitor assembly | (24) Knock sensor |
| (3) Crankshaft position sensor | (25) Front oxygen (A/F) sensor |
| (4) Camshaft position sensor | (26) Rear oxygen sensor |
| (5) Throttle position sensor | (27) A/C compressor |
| (6) Fuel injectors | (28) Neutral switch |
| (7) Pressure regulator | (29) CHECK ENGINE malfunction indicator lamp (MIL) |
| (8) Engine coolant temperature sensor | (30) Tachometer |
| (9) Intake air temperature sensor | (31) A/C relay |
| (10) Intake manifold pressure sensor | (32) A/C control module |
| (11) Idle air control solenoid valve | (33) Ignition switch |
| (12) Purge control solenoid valve | (34) Vehicle speed sensor |
| (13) Fuel pump | (35) Data link connector |
| (14) PCV valve | (36) Fuel tank pressure sensor |
| (15) Air cleaner | (37) Pressure control solenoid valve |
| (16) Canister | (38) Fuel temperature sensor |
| (17) Main relay | (39) Fuel level sensor |
| (18) Fuel pump relay | (40) Drain filter |
| (19) Fuel filter | (41) Vent valve |
| (20) Front catalytic converter | (42) Shut-off valve |
| (21) Rear catalytic converter | (43) Drain valve |
| (22) Radiator fan | |

SCHEMATIC DIAGRAMS

Emission Control (Aux. Emission Control Devices)

B: AT VEHICLES

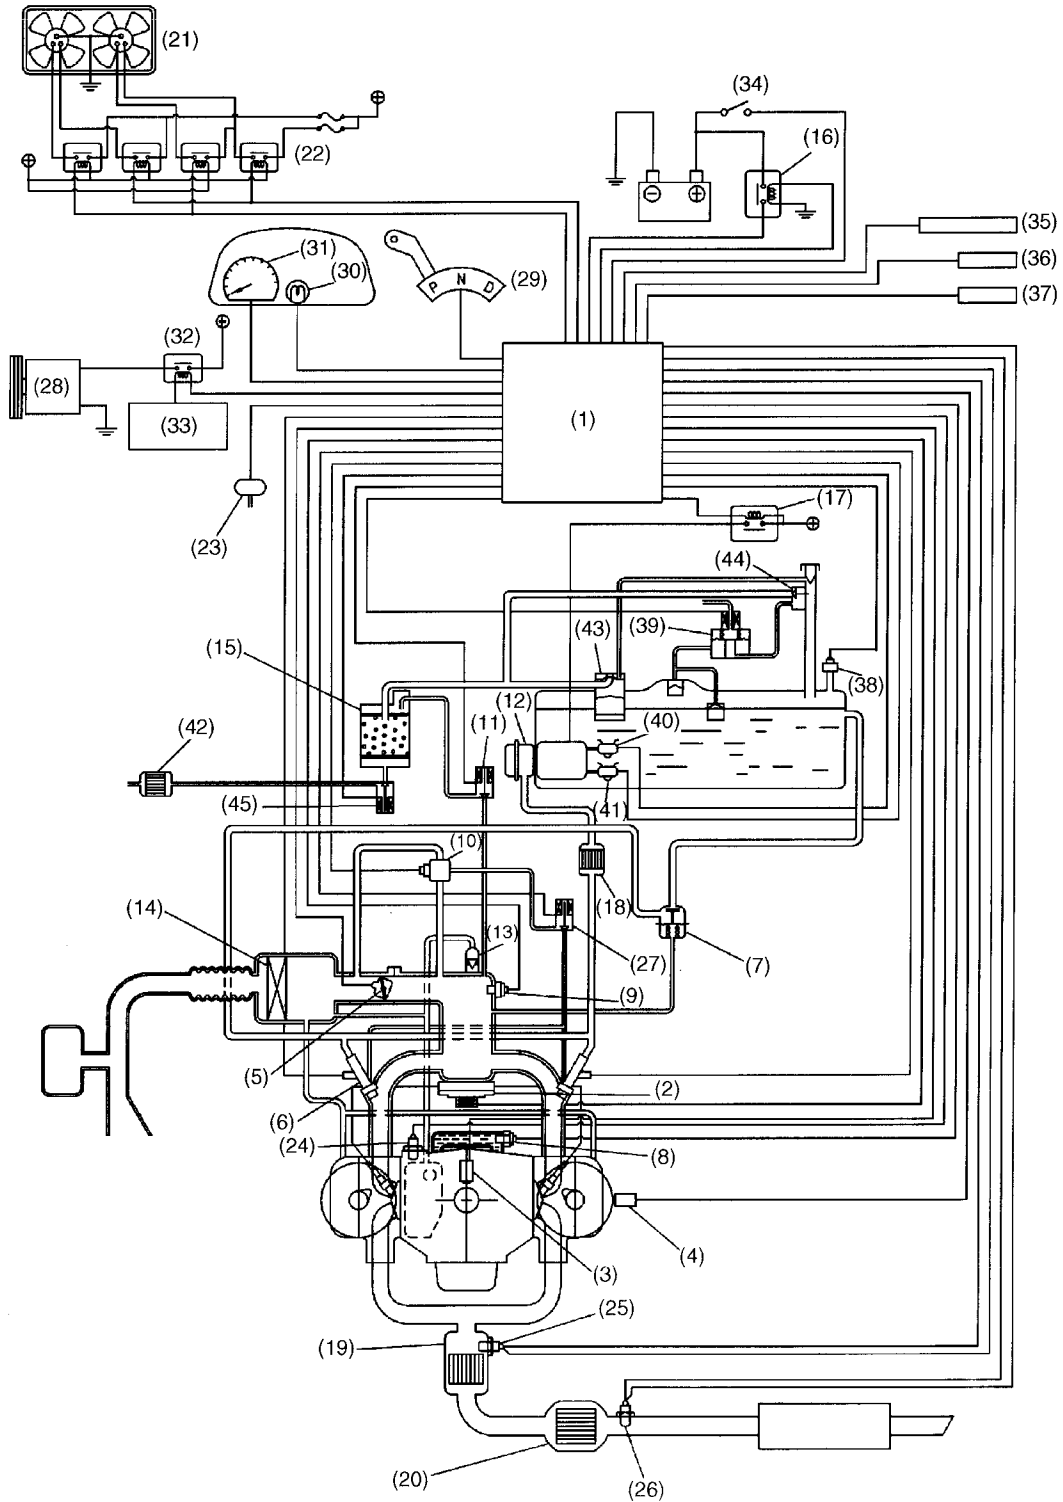

B2H3446A

SCHMATIC DIAGRAMS

Emission Control (Aux. Emission Control Devices)

- | | |
|--|--|
| (1) Engine control module (ECM) | (24) Knock sensor |
| (2) Ignition coil and ignitor assembly | (25) Front oxygen (A/F) sensor |
| (3) Crankshaft position sensor | (26) Rear oxygen sensor |
| (4) Camshaft position sensor | (27) Air assist injector solenoid valve |
| (5) Throttle position sensor | (28) A/C compressor |
| (6) Fuel injectors | (29) Inhibitor switch |
| (7) Pressure regulator | (30) CHECK ENGINE malfunction indicator lamp (MIL) |
| (8) Engine coolant temperature sensor | (31) Tachometer |
| (9) Intake air temperature and pressure sensor | (32) A/C relay |
| (10) Idle air control solenoid valve | (33) A/C control module |
| (11) Purge control solenoid valve | (34) Ignition switch |
| (12) Fuel pump | (35) Transmission control module (TCM) |
| (13) PCV valve | (36) Vehicle speed sensor |
| (14) Air cleaner | (37) Data link connector |
| (15) Canister | (38) Fuel tank pressure sensor |
| (16) Main relay | (39) Pressure control solenoid valve |
| (17) Fuel pump relay | (40) Fuel temperature sensor |
| (18) Fuel filter | (41) Fuel level sensor |
| (19) Front catalytic converter | (42) Drain filter |
| (20) Rear catalytic converter | (43) Vent valve |
| (21) Radiator fan | (44) Shut-off valve |
| (22) Radiator fan relay | (45) Drain valve |
| (23) Atmospheric pressure sensor | |