
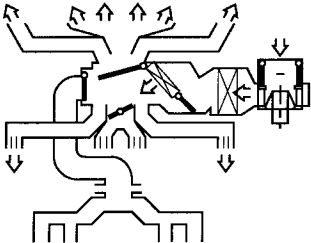

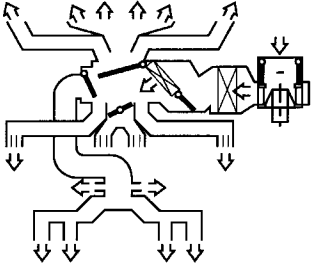

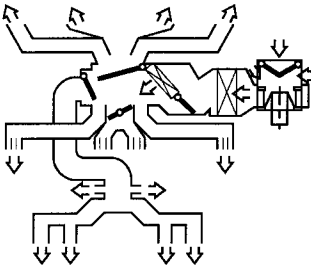

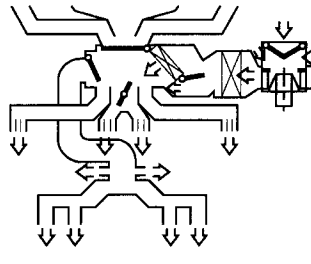

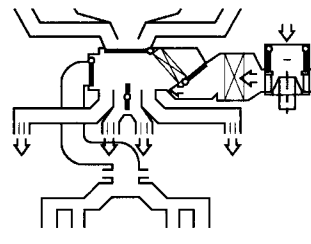


MODE SELECTOR SWITCH AND AIR FLOW

HVAC System (Heater, Ventilator and A/C)

3. Mode Selector Switch and Air Flow

A: AIR FLOW

Mode selector switch position	Air flow
 <p>DEF</p>	
 <p>DEF/HEAT</p>	
 <p>HEAT</p>	
 <p>BI-LEVEL</p>	
 <p>VENT</p>	


B4H2241A

MODE SELECTOR SWITCH AND AIR FLOW

HVAC System (Heater, Ventilator and A/C)


B: AIR DISTRIBUTION RATIO

The following diagram shows air distribution for each position of the mode selector switch.

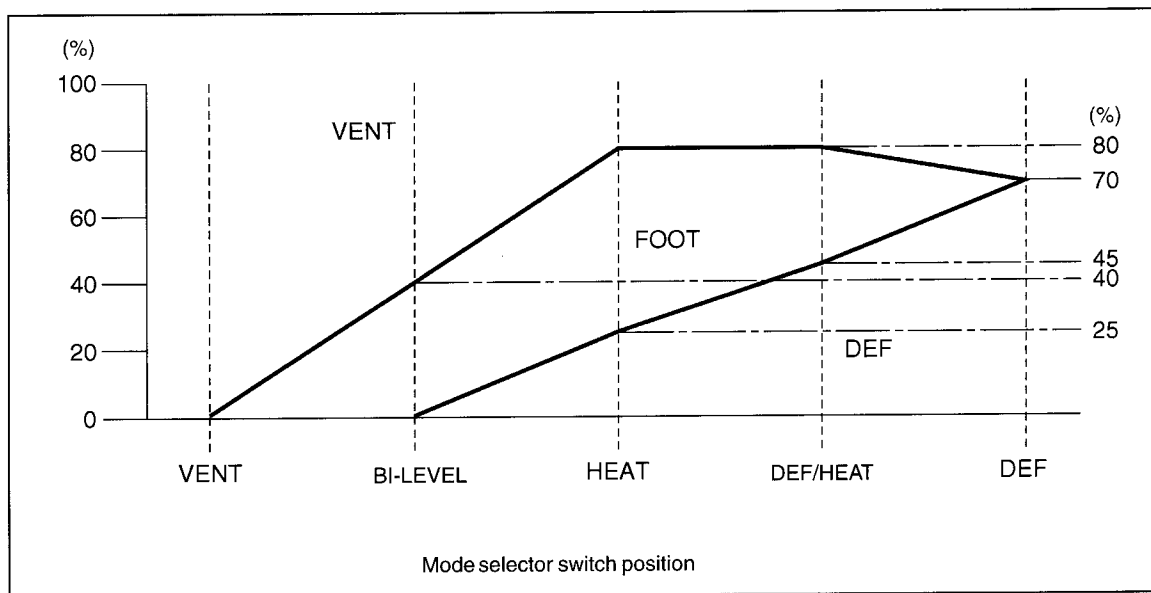

B4H1513C

C: SYSTEM CONTROL FLOW

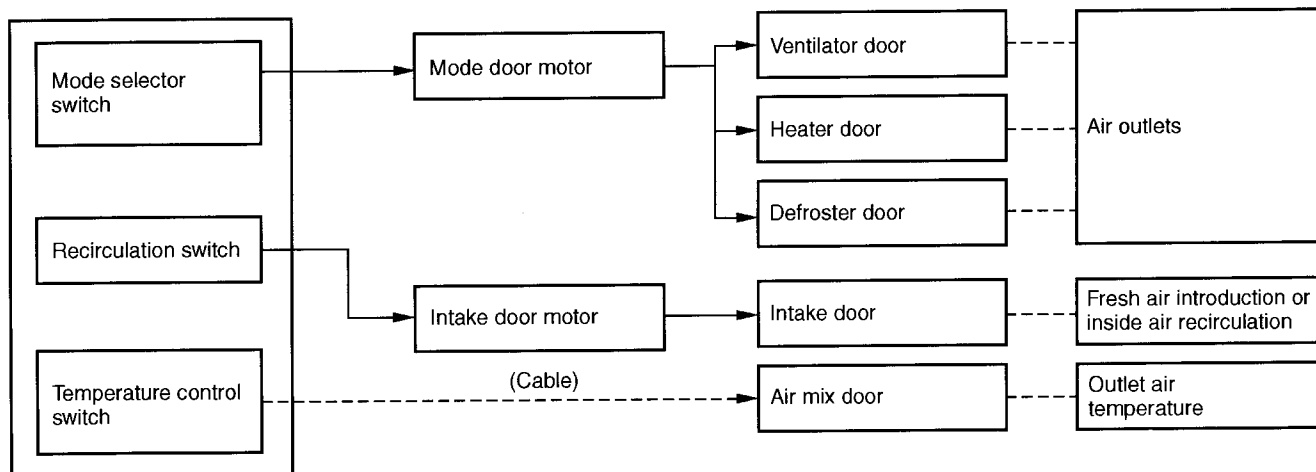

B4H0046B