


# MODE DOOR CONTROL

HVAC System (Heater, Ventilator and A/C)

---

## 4. Mode Door Control

The servo motor for driving the mode door is installed on the side facing the driver's seat of the heater unit. Operating the mode selector switch sends a signal to the servo motor. In response to the signal, the motor makes a clockwise or counterclockwise rotation to drive the mode door through a link.

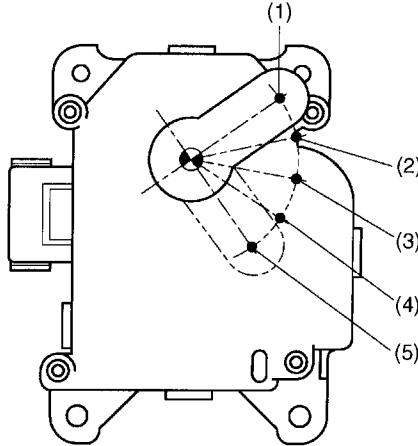

B4H1505A

- (1) DEF position
- (2) DEF/HEAT position
- (3) HEAT position
- (4) VENT/HEAT position
- (5) VENT position