

## 3. Keyless Entry System

### A: CONSTRUCTION

- The keyless entry system consists of a transmitter, keyless entry control module (with a built-in antenna), door lock actuators, door switches, horn and interior light.
- The keyless entry system operates on a radio frequency, so its transmitter can be used in almost all directions relative to the vehicle.

### B: FUNCTION

#### 1. DOOR LOCKING

- 1) Push the transmitter's LOCK button once.
- 2) All doors are locked.
- 3) Check that the horn chirps once.

#### 2. DOOR UNLOCKING (DRIVER'S DOOR)

- 1) Push the transmitter's UNLOCK button once.
- 2) The driver's door is unlocked and the interior light turns ON (when the interior light switch is set at the middle position).

#### NOTE:

The interior light illuminates for 30 seconds and then goes out. (However, if the ignition switch is turned ON or a door locking procedure is performed again during this period, the light will go out immediately.)

- 3) Check that the horn chirps twice.

#### 3. DOOR UNLOCKING (ALL DOORS)

- 1) Push the transmitter's UNLOCK button twice.
- 2) All doors are unlocked.
- 3) No audible or visible sign is given even after all the doors are unlocked.

#### 4. PANIC ALARM SETTING

- 1) Push the transmitter's LOCK button for more than 2 seconds.
- 2) The horn sounds continuously. To stop the horn, push any transmitter's button.

#### 5. ANSWER BACK (HORN SIGNALING) ON/OFF SELECTION

- 1) Push the transmitter's LOCK and UNLOCK buttons simultaneously for more than 2 seconds to activate the answer back function and push them again to deactivate it.
- 2) When the answer back function is activated, the horn will sound once. When it is deactivated, the horn will sound twice.

#### 6. DOOR OPEN WARNING FUNCTION

- The horn sounds three times if the transmitter's LOCK button is pressed with any door, rear gate or trunk lid opened.