

# BASIC DIAGNOSTIC PROCEDURE

Airbag System (DIAGNOSTICS)

## 1. Basic Diagnostic Procedure

S002627

### A: PROCEDURE S002627E45

No.	Step	Check	Yes	No
1	<b>Read Diagnostic Trouble Code.</b> <Ref. to AB-20 Read Diagnostics Trouble Code.>	Is the normal code being detected?	Finish the diagnosis.	Go to step 2.
2	<b>Read Diagnostic Trouble Code.</b> <Ref. to AB-20 Read Diagnostics Trouble Code.>	Is the trouble code being detected?	Go to step 3.	Go to "Airbag Warning Light Failure". <Ref. to AB-23 Airbag Warning Light Failure.>
3	<b>Perform the diagnosis.</b> 1) Judge the possible cause from "List of Diagnostic Trouble Code" <Ref. to AB-29 List of Diagnostic Trouble Code.>. 2) Inspect using "Diagnostic Chart with Trouble Code". (DTC) 3) Repair the cause of the trouble. 4) Perform the clear memory mode. <Ref. to AB-22 Clear Memory Mode.> 5) Perform the inspection mode. <Ref. to AB-21 Inspection Mode.> 6) Read diagnostic trouble code.	Is the trouble code being detected?	Perform the procedure 1) to 5) in step 3.	Finish the diagnosis.