



## 10. Side Airbag Sensor S802298

### A: REMOVAL S802298A18

- 1) Turn ignition switch OFF.
- 2) Disconnect the ground cable from the battery, and wait for at least 20 seconds before starting work.
- 3) Remove center pillar lower trim. <Ref. to EI-43 REMOVAL, Lower Inner Trim.>
- 4) Remove Outer Belt (FRONT). <Ref. to 8 REMOVAL, Front Seat Belt.>
- 5) Remove bracket (A), and then remove cap (B).

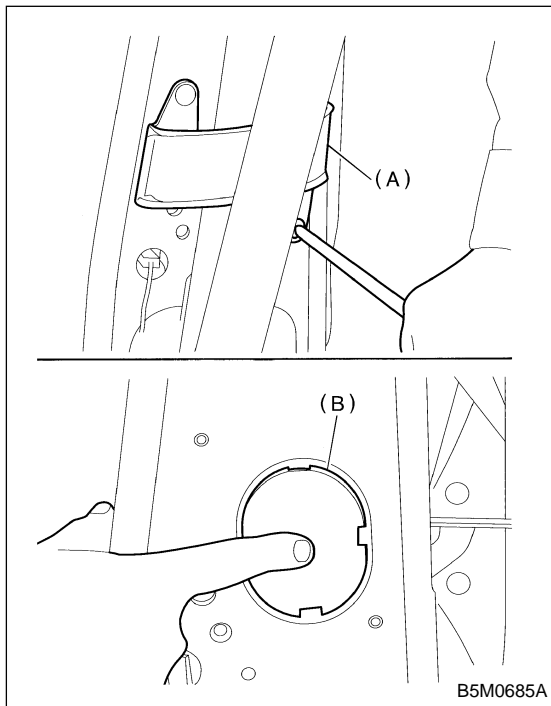

- 6) Using E12 TORX® remove two TORX® nuts, and then detach side airbag sensor (A).

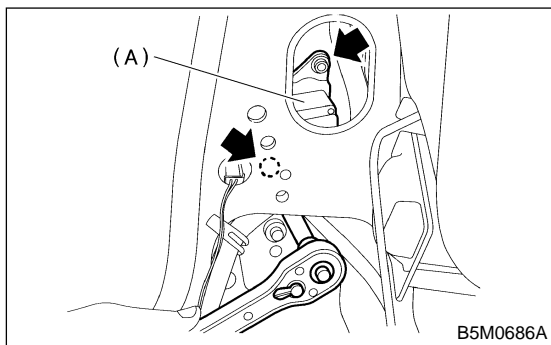

### B: INSTALLATION S802298A11

#### CAUTION:

Use new TORX® nuts during re-assembly.  
Install in the reverse order of removal.

### C: INSPECTION S802298A10

Check for the following, and replace damaged parts with new parts.

- Bracket connector for side airbag sensor is damaged.