


## 11. Reservoir Tank S146075

### A: REMOVAL S146075A18

- 1) Disconnect over flow hose from radiator filler neck position.
- 2) Remove bolts which install reservoir tank onto radiator main fan shroud.
- 3) Remove reservoir tank.

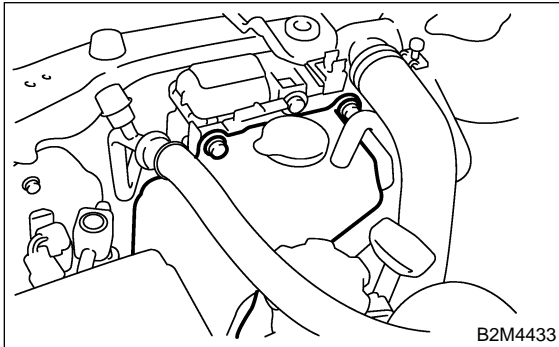


### B: INSTALLATION S146075A11

Install in the reverse order of removal.

#### **Tightening torque:**

**4.9N·m (0.50 kgf·m, 3.6 ft·lb)**

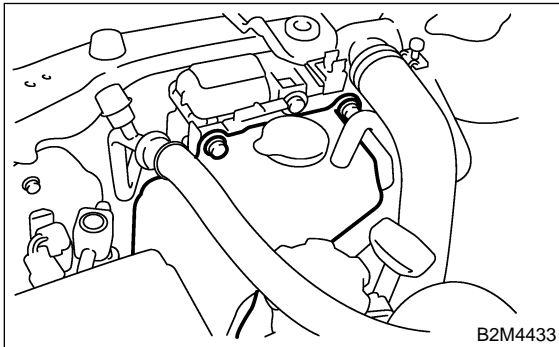

### C: INSPECTION S146075A10

Make sure the engine coolant level is between full and low.