

SUB FUEL LEVEL SENSOR

Emission Control (Aux. Emission Control Devices)

9. Sub Fuel Level Sensor S140029

A: REMOVAL S140029A18

For work procedures, refer to "FU(H6)" section.
<Ref. to FU(H6)-94 REMOVAL, Fuel Sub Lever Sensor.>

B: INSTALLATION S140029A11

For work procedures, refer to "FU(H6)" section.
<Ref. to FU(H6)-95 INSTALLATION, Fuel Sub Lever Sensor.>