



## 4. Engine Coolant Temperature Sensor S145047

### A: REMOVAL S145047A18

- 1) Disconnect battery ground cable.

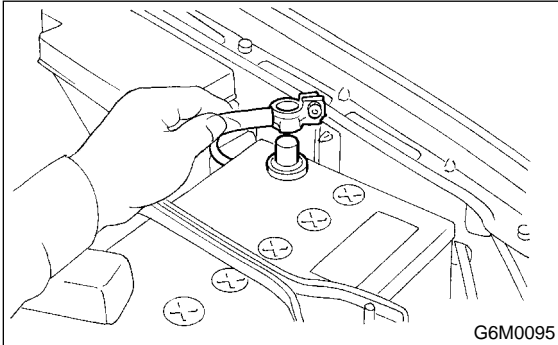

- 2) Disconnect connector from engine coolant temperature sensor.
- 3) Remove engine coolant temperature sensor.

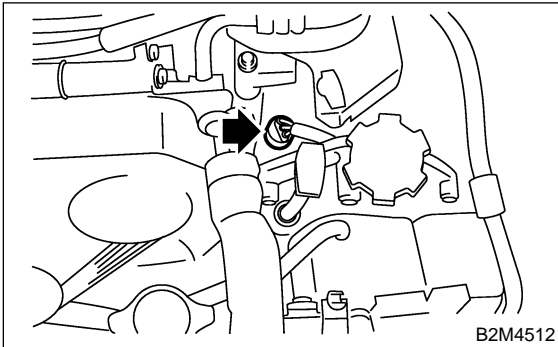

### B: INSTALLATION S145047A11

Install in the reverse order of removal.

**Tightening torque:**

**16 N·m (0.16 kgf-m, 1.2 ft-lb)**

