


8. Throttle Position Sensor S145039


A: REMOVAL S145039A18

- 1) Disconnect battery ground cable.

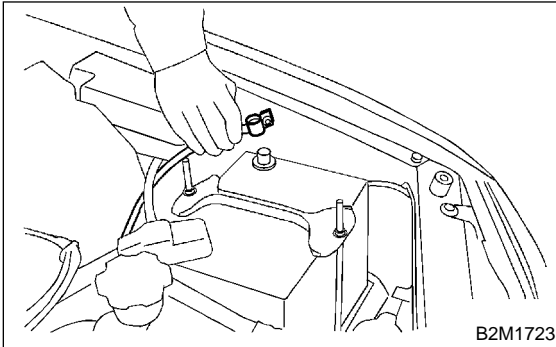

Remove air intake chamber. <Ref. to IN(H6)-6, REMOVAL, Air Intake Chamber.>

- 2) Disconnect connector from throttle position sensor.
- 3) Remove throttle position sensor holding screws, and remove throttle position sensor itself.

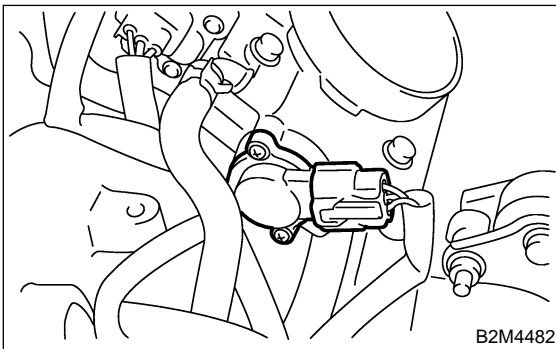

B: INSTALLATION S145039A11

Install in the reverse order of removal.

CAUTION:

When installing throttle position sensor, adjust the position to match with the specified data.

Tightening torque:

1.6 N·m (0.16 kgf-m, 1.2 ft-lb)

