

INTAKE MANIFOLD PRESSURE SENSOR

Fuel Injection (Fuel Systems)


9. Intake Manifold Pressure Sensor

S145568


A: REMOVAL

S145568A18

- 1) Disconnect battery ground cable.

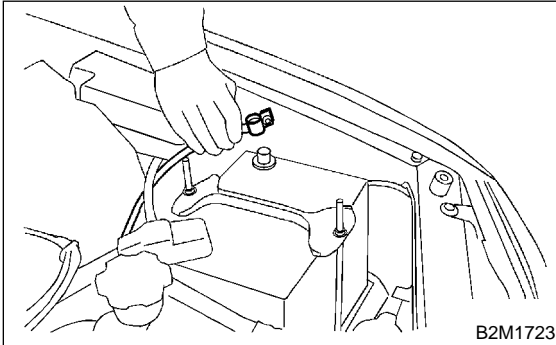

- 2) Disconnect connector from intake manifold pressure sensor.
- 3) Remove intake manifold pressure sensor from throttle body.

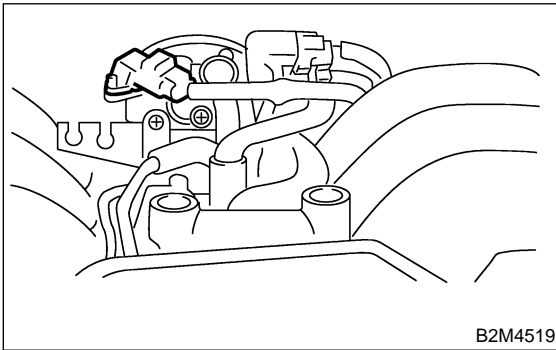

B: INSTALLATION

S145568A11

Install in the reverse order of removal.

CAUTION:

Replace gasket with new one.

Tightening torque:

1.6 N·m (0.16 kgf·m, 1.2 ft·lb)

