



18. Main Relay S145050

A: REMOVAL S145050A18

- 1) Disconnect battery ground cable.

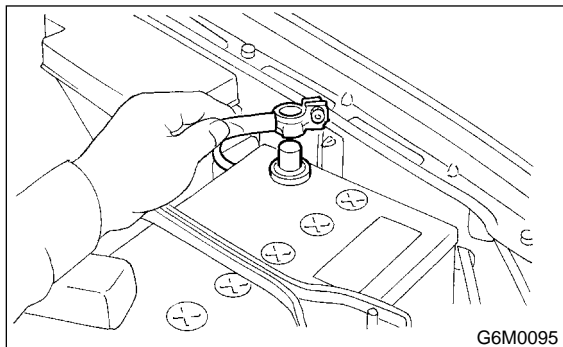

- 2) Remove lower inner trim of passenger side.
<Ref. to EI-43, REMOVAL, Lower Inner Trim.>
- 3) Disconnect connectors from main relay.
- 4) Remove bolt which holds main relay bracket on body.

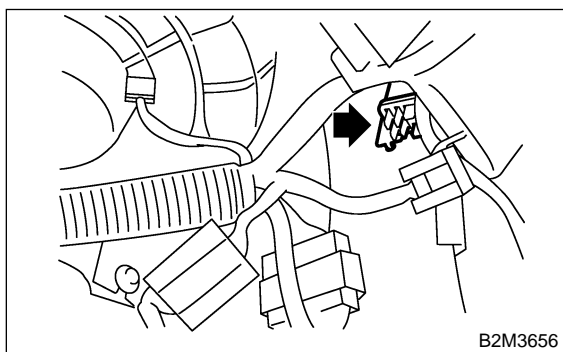

B: INSTALLATION S145050A11

Install in the reverse order of removal.