


FUEL CUT VALVE

Fuel Injection (Fuel Systems)

27. Fuel Cut Valve S145021

A: REMOVAL S145021A18

- 1) Remove fuel tank. <Ref. to FU(H6)-52, REMOVAL, Fuel Tank.>
- 2) Move clip and disconnect evaporation hose from fuel cut valve.

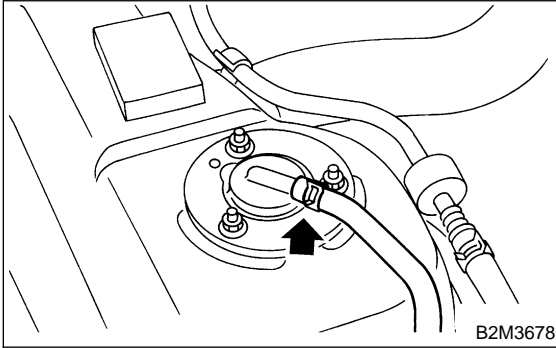

- 3) Remove bolts which install fuel cut valve.

B: INSTALLATION S145021A11

Install in the reverse order of removal.

Tightening torque:

4.4 N·m (0.45 kgf·m, 3.3 ft·lb)

