

# GENERAL DESCRIPTION


Ignition

## 1. General Description S141001

### A: SPECIFICATIONS S141001E49

Item		Designation
Ignition coil and ignitor assembly	Model	FK0140
	Manufacturer	DIAMOND
Spark plug	Type and manufacturer	PLFR6A-11 ..... NGK
	Thread size	mm 14, P = 1.25
	Spark gap	mm (in) 1.0 — 1.1 (0.039 — 0.043)

## B: COMPONENT S141001A05

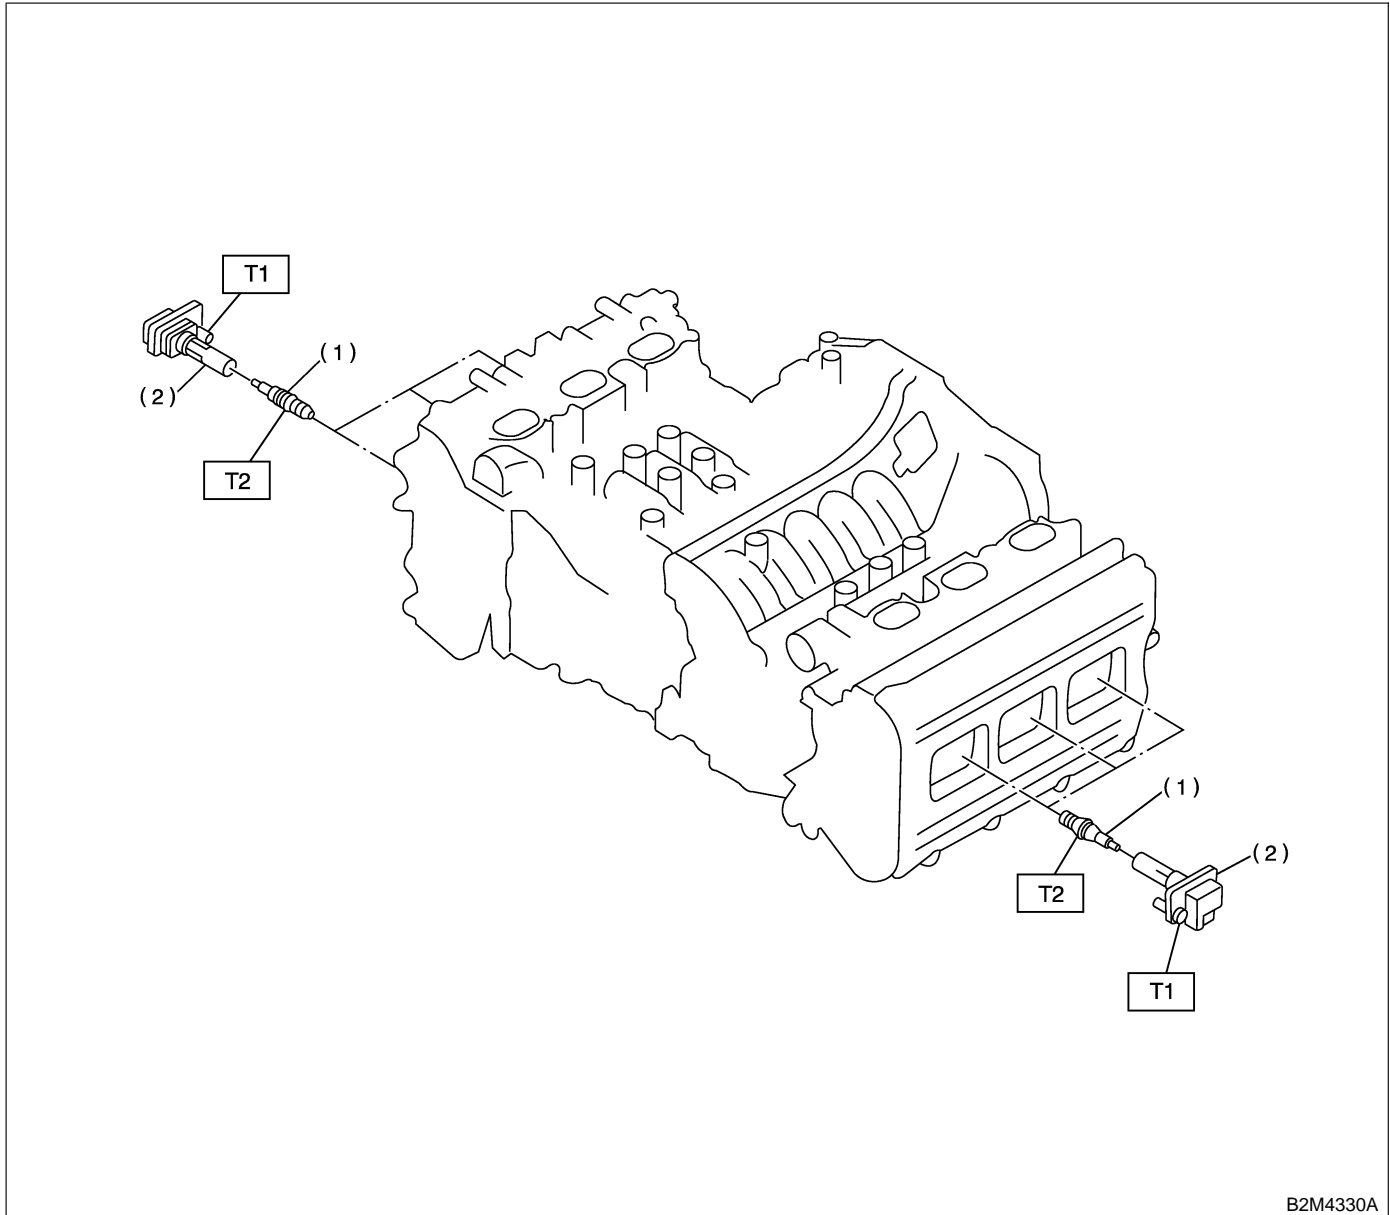

B2M4330A

- (1) Spark plug
- (2) Ignition coil and ignitor ASSY

**Tightening torque: N·m (kgf·m, ft·lb)**

**T1: 16 (1.6, 12)**

**T2: 21 (2.1, 15)**

## C: CAUTION S141001A03

- Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust or dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary

removal, installation, disassembly, and replacement.

- Be careful not to burn your hands, because each part on the vehicle is hot after running.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or safety stands at the specified points.
- Before disconnecting electrical connectors of sensors or units, be sure to disconnect negative terminal from battery.