


**6. V-belt** S143080

**A: REMOVAL** S143080A18


- 1) Fit the tool to the belt tensioner mounting bolt.
- 2) Turn the tool clockwise, and loosen the V-belt to remove.

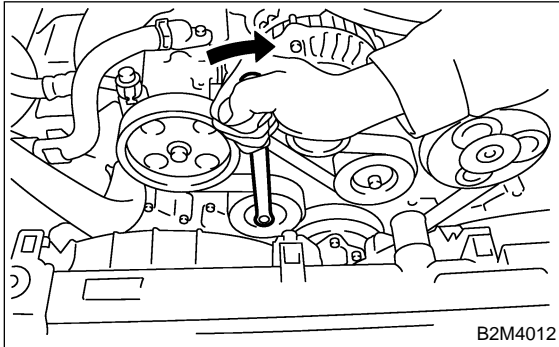

- 3) Remove the V-belt cover.

**B: INSTALLATION** S143080A11


- 1) Install in the reverse order of removal.

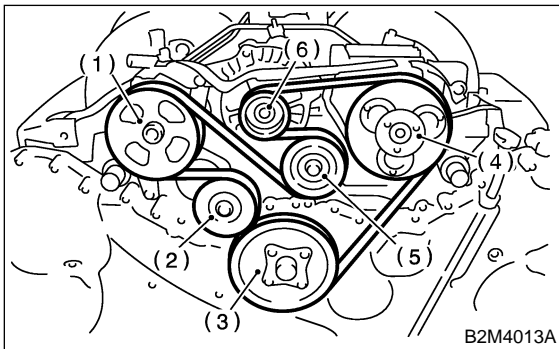

- (1) Power steering oil pump
- (2) Belt tension adjuster
- (3) Crankshaft pulley
- (4) A/C compressor
- (5) Belt idler
- (6) Generator

**C: INSPECTION** S143080A10

- 1) Replace belts, if cracks, fraying or wear is found.
- 2) Check that the V-belt automatic tensioner indicator is within the range (D).

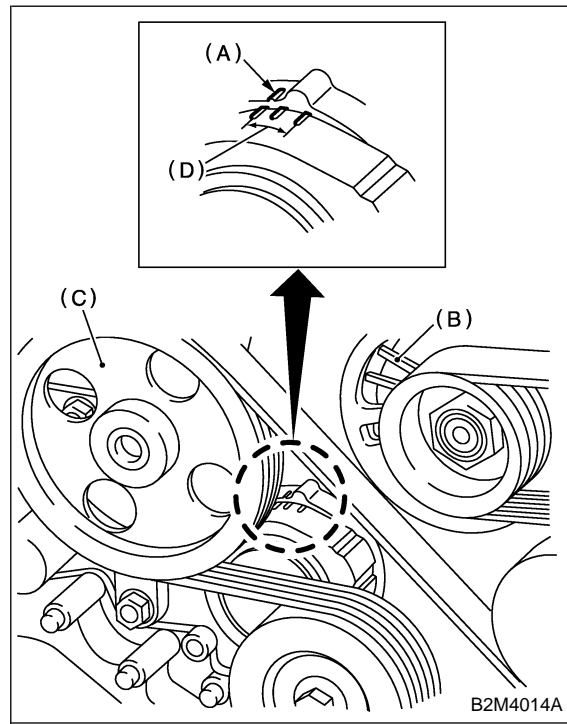

- (A) Indicator
- (B) Generator
- (C) Power steering oil pump
- (D) Service limit