

8. Engine Mounting S143085

A: REMOVAL S143085A18

- 1) Remove engine assembly. <Ref. to ME(H6)-32, REMOVAL, Engine Assembly.>
- 2) Remove engine mounting from engine assembly.

B: INSTALLATION S143085A11

Install in the reverse order of removal.

Tightening torque:

Engine mounting;

34 N·m (3.5 kgf-m, 25.3 ft-lb)

C: INSPECTION S143085A10

Make sure there are no cracks or other damage.