

9. Fuel Line SA07686

A: INSPECTION SA07686A10

The fuel line is located mostly internally, so check pipes, areas near pipes, and engine compartment piping for rust, hose damage, loose bands, etc. If faulty parts are found, repair or replace them. <Ref. to FU(H4)-98 Fuel Delivery, Return and Evaporation Lines.> or <Ref. to FU(H6)-77, Fuel Delivery, Return and Evaporation Lines.>