

READ DIAGNOSTIC TROUBLE CODE

Automatic Transmission (DIAGNOSTICS)

8. Read Diagnostic Trouble Code


S004508

A: OPERATION

S004508A16

1. WITHOUT SUBARU SELECT MONITOR

S004508A1601

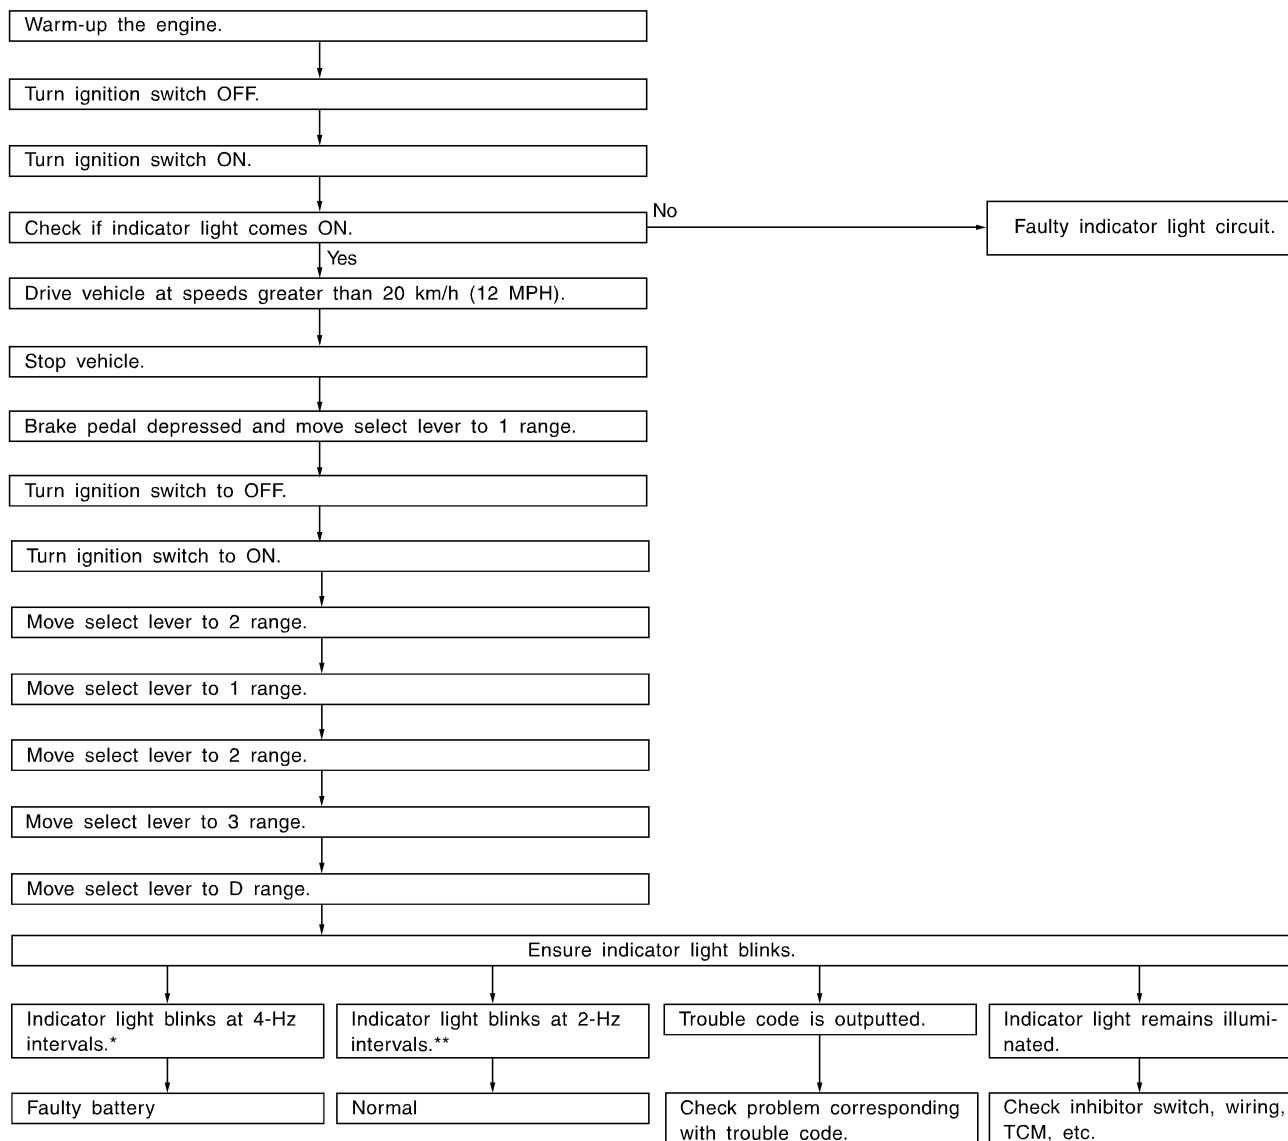

* : Blinks every 0.125 (1/8) seconds (until ignition switch is turned OFF).

** : Blinks every 0.25 (1/4) seconds (until ignition switch is turned OFF).


B3M2111A

READ DIAGNOSTIC TROUBLE CODE

Automatic Transmission (DIAGNOSTICS)

The AT OIL TEMP warning light flashes the code corresponding to the faulty part.

The long segment (1.2 sec on) indicates a “ten”, and the short segment (0.2 sec on) signifies a “one”.

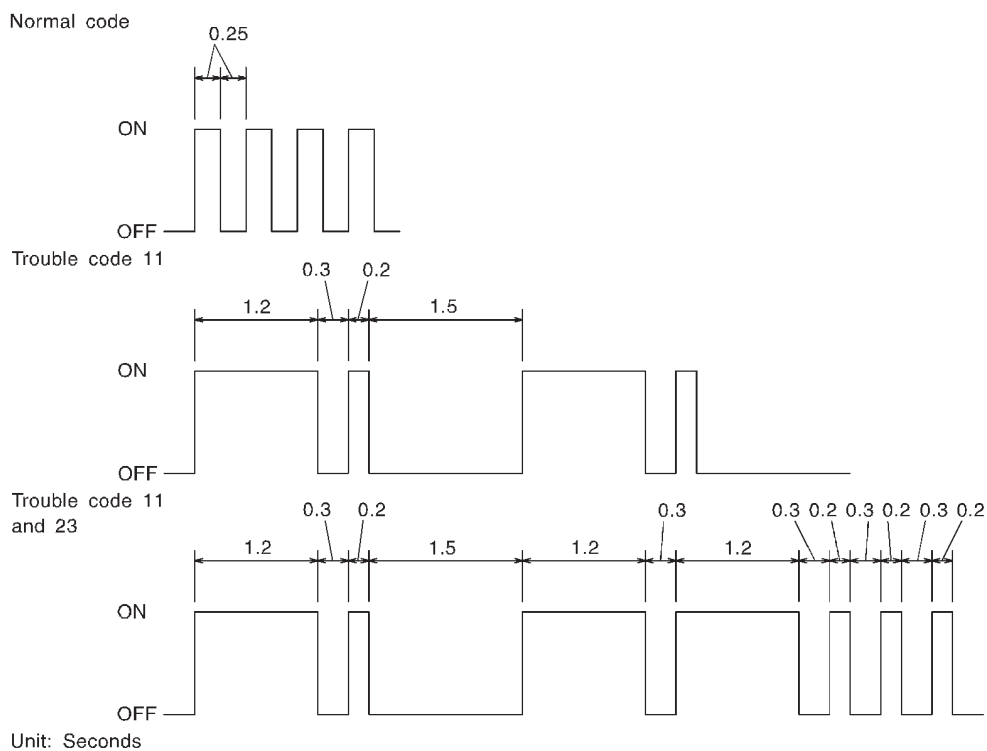

B3M1199A

2. WITH SUBARU SELECT MONITOR

S004508A1602

Refer to SUBARU SELECT MONITOR for information about how to obtain and understand trouble codes. <Ref. to AT-24 OPERATION, Subaru Select Monitor.>