

4. Road Test S502247**A: INSPECTION** S502247A10**1. GENERAL PRECAUTION** S502247A1001

Road tests should be conducted to properly diagnose the condition of the automatic transmission.

CAUTION:

When performing test, do not exceed posted speed limit.

2. D RANGE SHIFT FUNCTION S502247A1002

Check shifting between 1st ⇔ 2nd ⇔ 3rd ⇔ 4th while driving on normal city streets.

3. D RANGE SHIFT SHOCK S502247A1003

Check the shock level when shifting up during normal driving.

4. KICK-DOWN FUNCTION S502247A1004

Check kick-down for each gear. Also check the kick-down shock level.

5. ENGINE BRAKE OPERATION S502247A1005

- Check the 3rd gear engine brake when shifting between D ⇔ 3rd range while driving in 4th gear of D range [50 to 60 km/h (31 to 37 MPH)].
- Check the 2nd gear engine brake when shifting between 3 ⇔ 2 range while driving in the 3 range 3rd gear [40 to 50 km/h (25 to 31 MPH)].
- Check the 1st gear engine brake when shifting between 2 ⇔ 1 range while driving in the 2 range 2nd gear [20 to 30 km/h (12 to 19 MPH)].

6. LOCK-UP FUNCTION S502247A1006

Check that rpm does not change sharply when the axle pedal is lightly depressed when driving on flat roads at normal speed in the lock-up range.

7. P RANGE OPERATION S502247A1007

Stop the vehicle on an uphill grade of 5% or more and shift to P range. Check that the vehicle does not move when the parking brake is released.

8. UNUSUAL SOUNDS AND VIBRATIONS502247A1008

Check for unusual sounds and vibration while driving and during shifting.

9. CLIMBING CONTROL FUNCTION S502247A1009

- Check that gear remains in 3rd when going up a grade.
- Check that gear remains in 3rd when applying the brakes while going down a grade.

10. OIL LEAKS S502247A1010

After the driving test, inspect for oil leaks.