

11. Oil Seal S502143

A: REPLACEMENT S502143A20


- 1) Clean transmission exterior.
- 2) Drain ATF completely.

NOTE:

Tighten ATF drain plug after draining ATF.

Tightening torque:

25 N·m (2.5 kgf-m, 18.1 ft-lb)

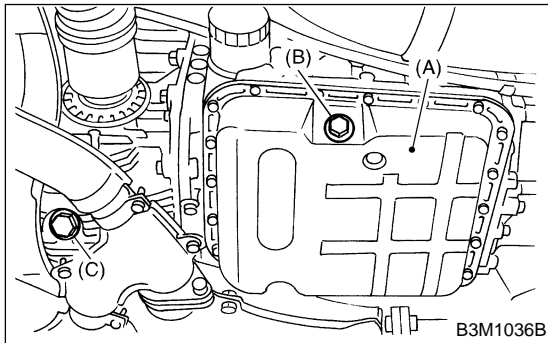

- (G) Oil pan
- (H) Drain plug
- (I) Differential oil drain plug

- 3) Remove the rear exhaust pipe and muffler.
- 4) Remove the heat shield cover.
- 5) Remove the propeller shaft. <Ref. to DS-13 REMOVAL, Propeller Shaft.>
- 6) Using ST, remove the oil seal.
ST 398527700 PULLER ASSY
- 7) Using ST, install the oil seal.
ST 498057300 INSTALLER
- 8) Install the propeller shaft. <Ref. to DS-14 INSTALLATION, Propeller Shaft.>
- 9) Install the heat shield cover.
- 10) Install the rear exhaust pipe and muffler.
- 11) Pour ATF and check the ATF level. <Ref. to AT-9 Automatic Transmission Fluid.>