


19. Speedometer Gear S503268

A: REMOVAL S503268A18

- 1) Remove the manual transmission assembly from vehicle. <Ref. to MT-27 REMOVAL, Manual Transmission Assembly.>
- 2) Remove back-up light switch and neutral position switch. <Ref. to MT-36 REMOVAL, Switches and Harness.>
- 3) Remove transfer case with extension case assembly. <Ref. to MT-39 REMOVAL, Transfer Case and Extension Case Assembly.>
- 4) Remove transmission case. <Ref. to MT-51 REMOVAL, Transmission Case.>
- 5) Remove vehicle speed sensor. <Ref. to MT-37 REMOVAL, Vehicle Speed Sensor.>
- 6) Remove outer snap ring and pull out speedometer driven gear. Next, remove vehicle speed sensor, oil seal, speedometer shaft and washer.

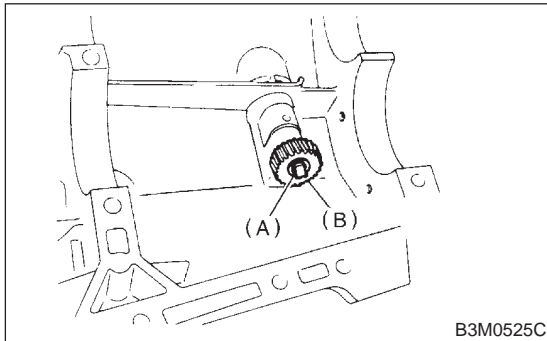

- (A) Outer snap ring
- (B) Speedometer driven gear

B: INSTALLATION S503268A11

- 1) Install washer and speedometer shaft, and press fit oil seal with ST.

CAUTION:


Use new oil seal, if it has been removed.

ST 899824100 or 499827000 PRESS

- 2) Install vehicle speed sensor. <Ref. to MT-37 INSTALLATION, Vehicle Speed Sensor.>
- 3) Install speedometer driven gear and snap ring.

CAUTION:

Use new snap ring, if it has been removed.

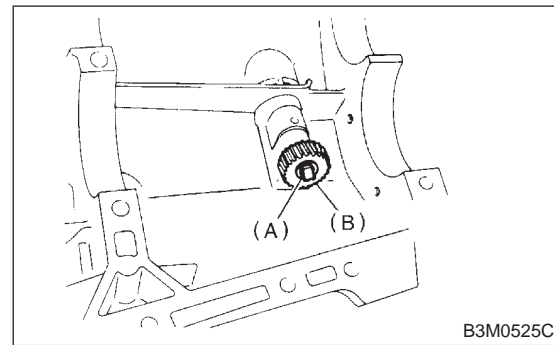

- (A) Outer snap ring
- (B) Speedometer driven gear

- 4) Install transmission case. <Ref. to MT-51 INSTALLATION, Transmission Case.>
- 5) Install transfer case with extension case assembly. <Ref. to MT-39 INSTALLATION, Transfer Case and Extension Case Assembly.>
- 6) Install back-up light switch and neutral position switch. <Ref. to MT-36 INSTALLATION, Switches and Harness.>
- 7) Install the manual transmission assembly from vehicle. <Ref. to MT-30 INSTALLATION, Manual Transmission Assembly.>

C: INSPECTION S503268A10

Check the speedometer gear, oil seal and speedometer shaft for damage. Replace if damaged.