


4. Cruise Control Main Switch


S912498

A: REMOVAL S912498A18

- 1) Disconnect ground cable from battery.
- 2) Remove switch panel (a) while disconnecting connector.

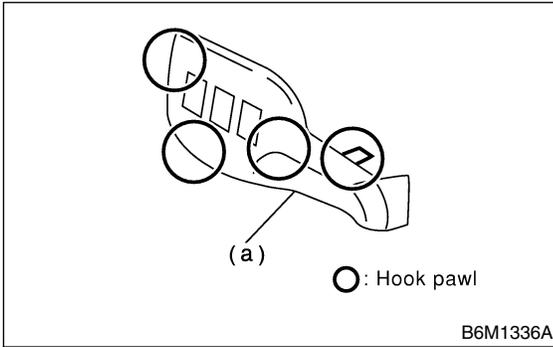

- 3) Remove main switch by pushing it outward.

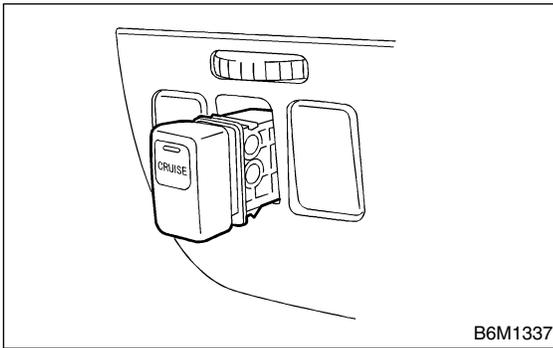


B: INSTALLATION S912498A11

Install is in the reverse order of removal.

C: INSPECTION S912498A10

Measure cruise control main switch resistance.

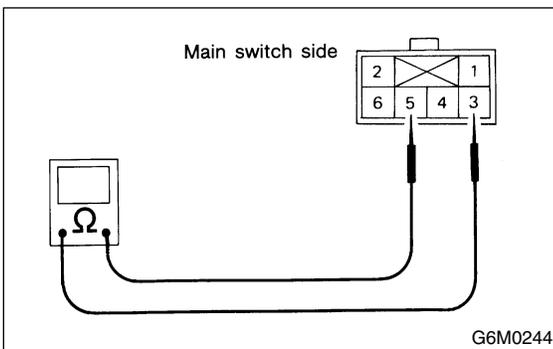

Switch position	Terminal No. 1	Standard
OFF	3 and 5	More than 1 MΩ
ON	3 and 5	Less than 1 Ω

If NG, replace cruise control main switch.