

## 6. Stop and Brake Switch S912496

### A: REMOVAL S912496A18


- 1) Disconnect ground cable from battery.
- 2) Disconnect connector from stop and brake switch, and then remove the switch. <Ref. to BR-45, REMOVAL, Stop Light Switch.>

### B: INSTALLATION S912496A11

Install in the reverse order of removal.

### C: INSPECTION S912496A10

Measure the brake switch (A) and stop light switch (B) resistance.

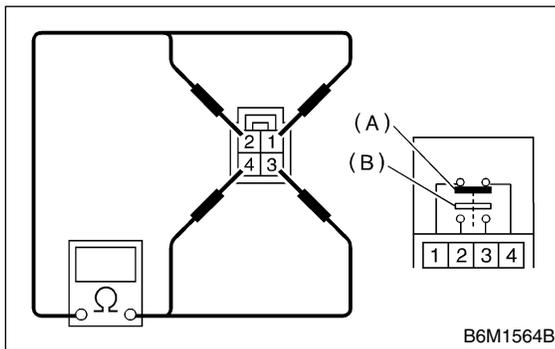

Switch	Pedal	Terminal No.	Standard
Brake	Released	1 and 4	Less than 1 $\Omega$
	Depressed	1 and 4	More than 1 M $\Omega$
Stop light	Released	2 and 3	More than 1 M $\Omega$
	Depressed	2 and 3	Less than 1 $\Omega$

If NG, replace stop and brake switch.