

CLUTCH SWITCH

7. Clutch Switch S912258

A: REMOVAL S912258A18


- 1) Disconnect ground cable from battery.
- 2) Disconnect the connector from the clutch switch, and then remove the switch. <Ref. to CL-21, DISASSEMBLY, Clutch Pedal.>

B: INSTALLATION S912258A11

Install in the reverse order of removal.

C: INSPECTION S912258A10

Measure clutch switch resistance.

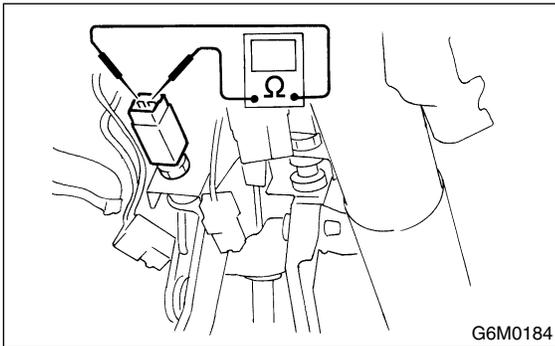

Switch	Pedal	Terminal No.	Standard
Clutch	Released	1 and 2	Less than 1 Ω
	Depressed	1 and 2	More than 1 M Ω

If NG, replace the clutch switch.